



SM-A725F Block Diagram

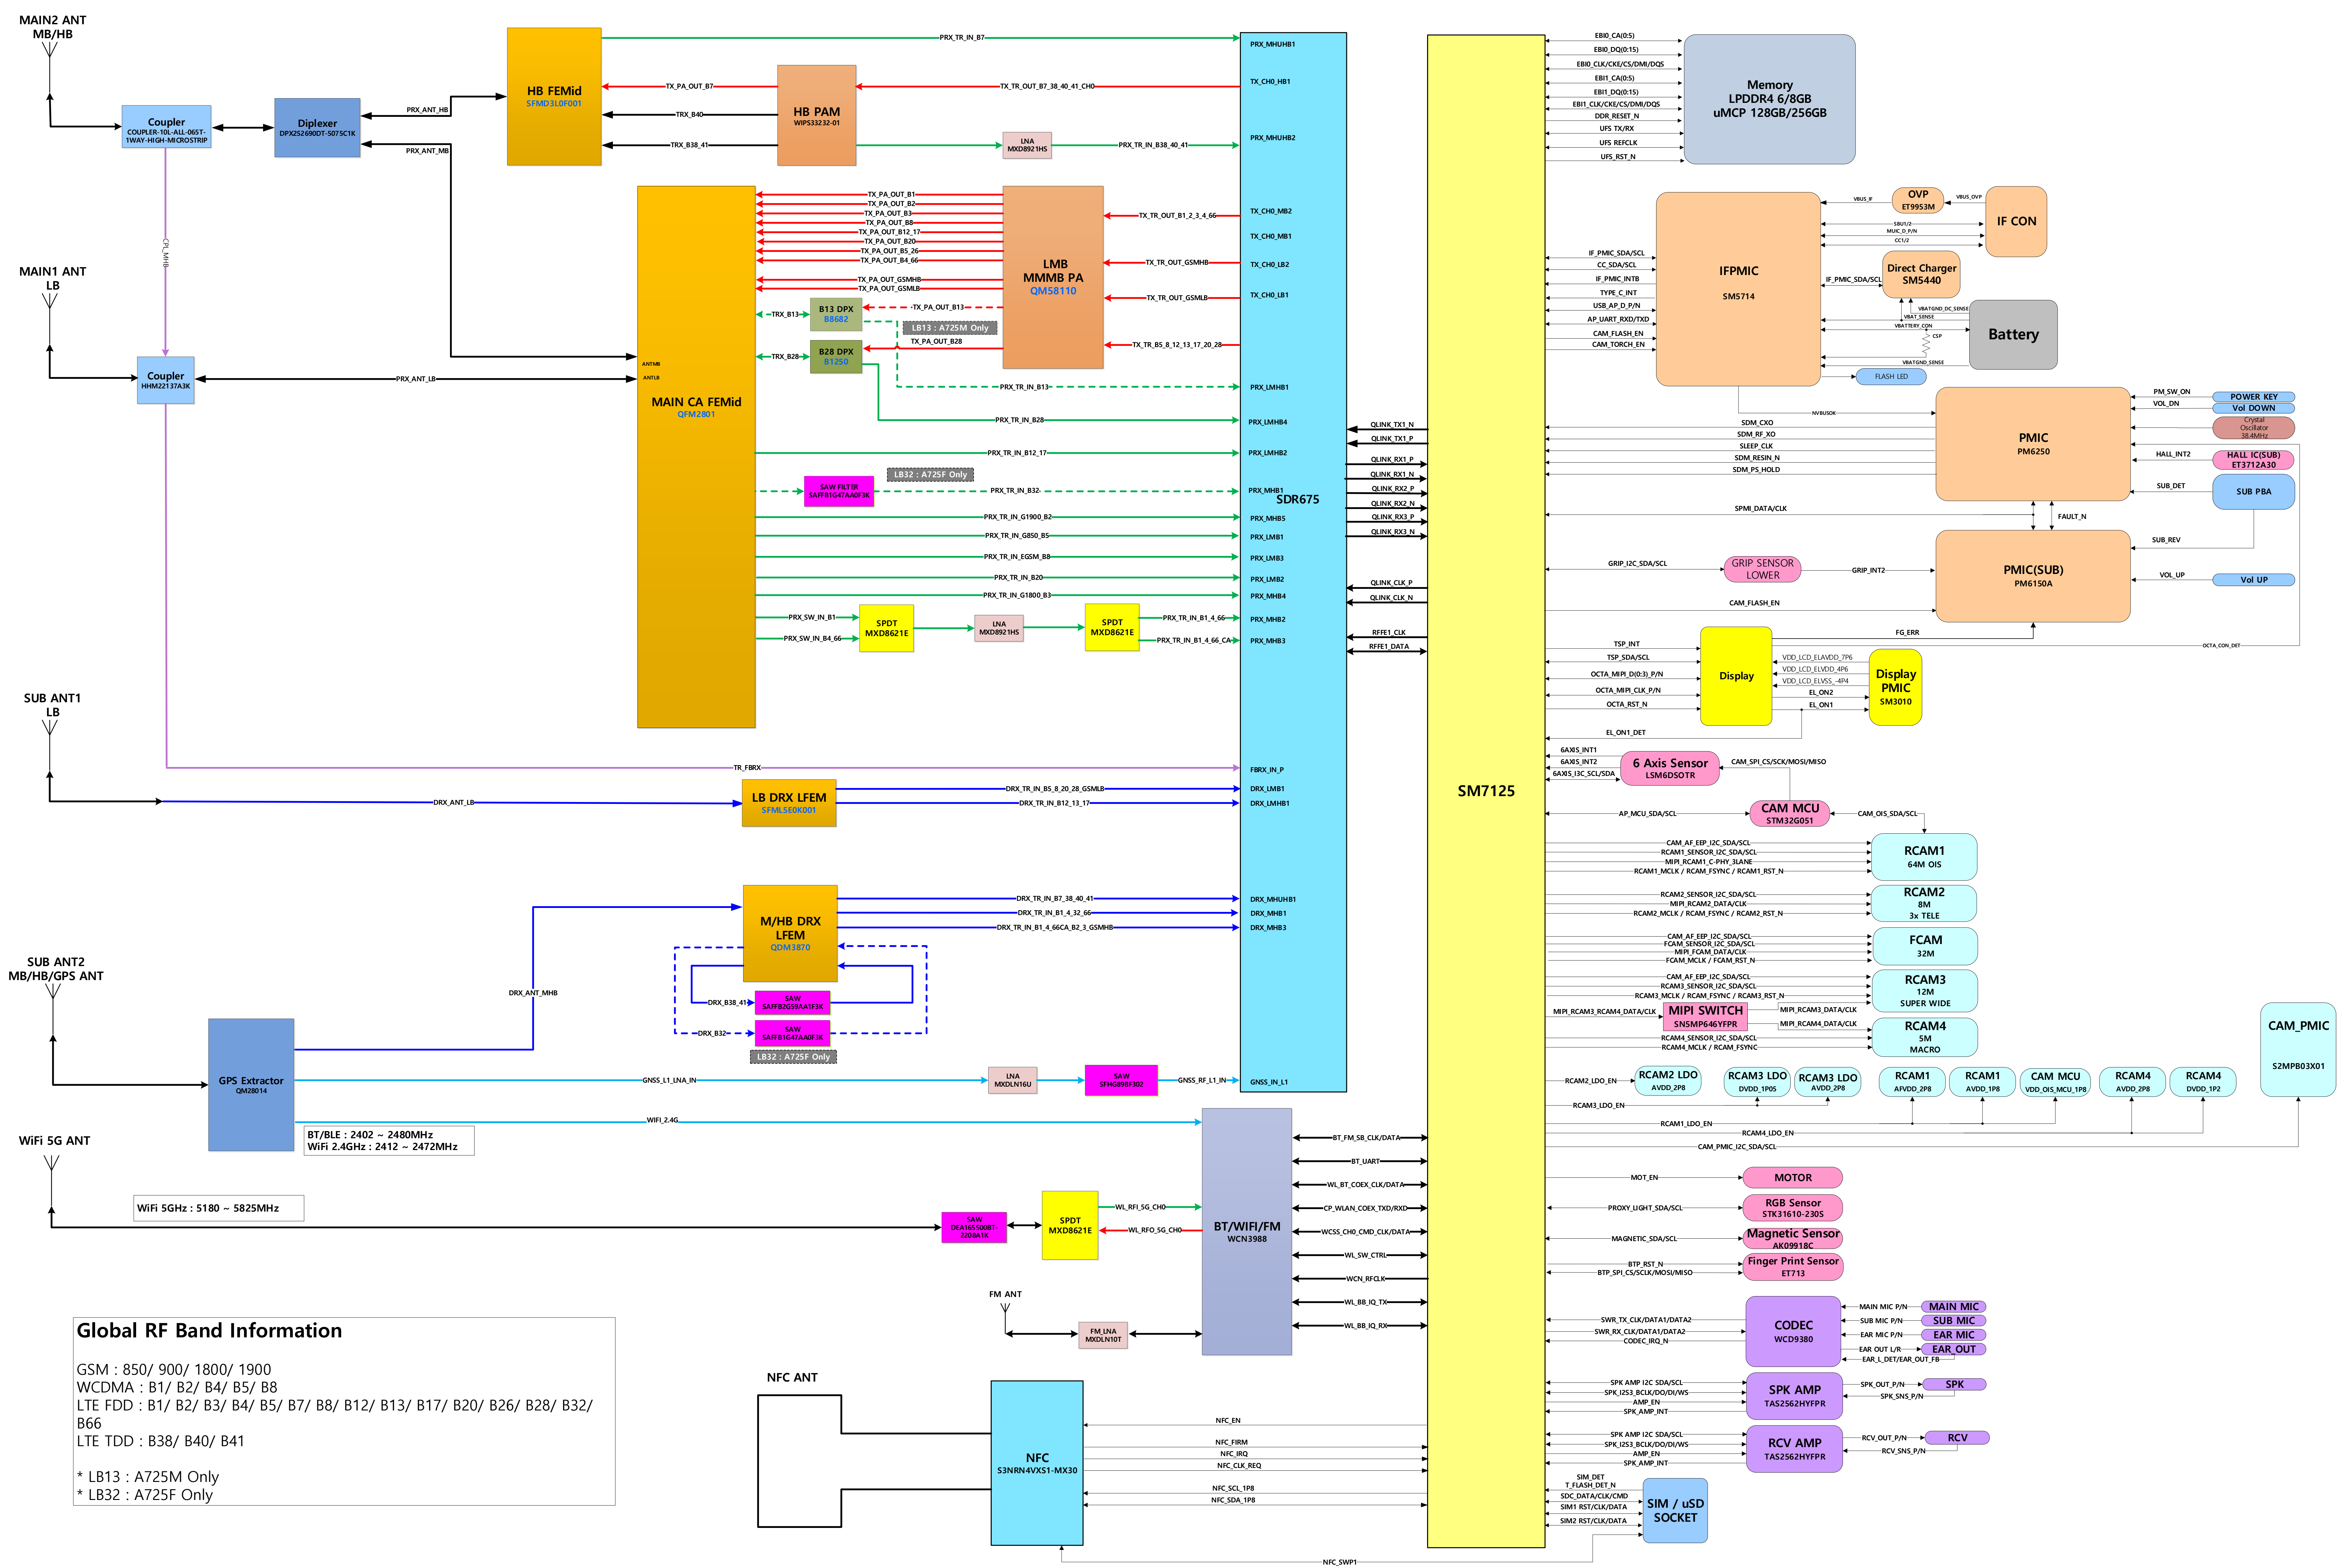


SDR675 Transceiver

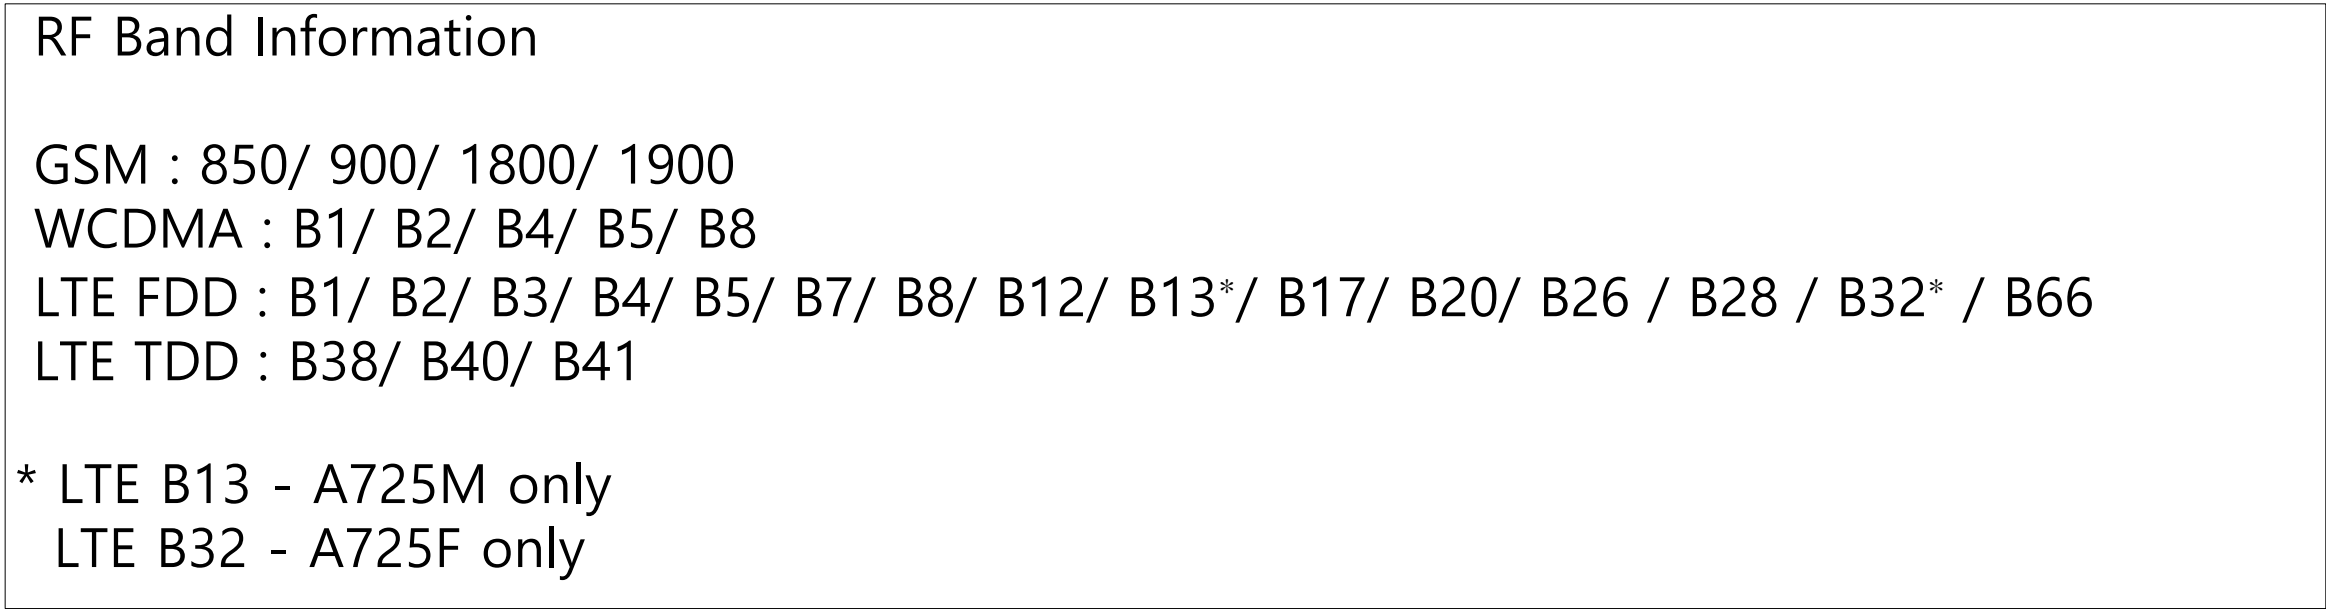

Model :
Revision :
Manufacture Count :
Charge :
Contact :
Date :
Routing :
Resin :

VX_SETUP(2020-11-25)_HHP


Created date of PCB data : 2021/1/7 16:23:56

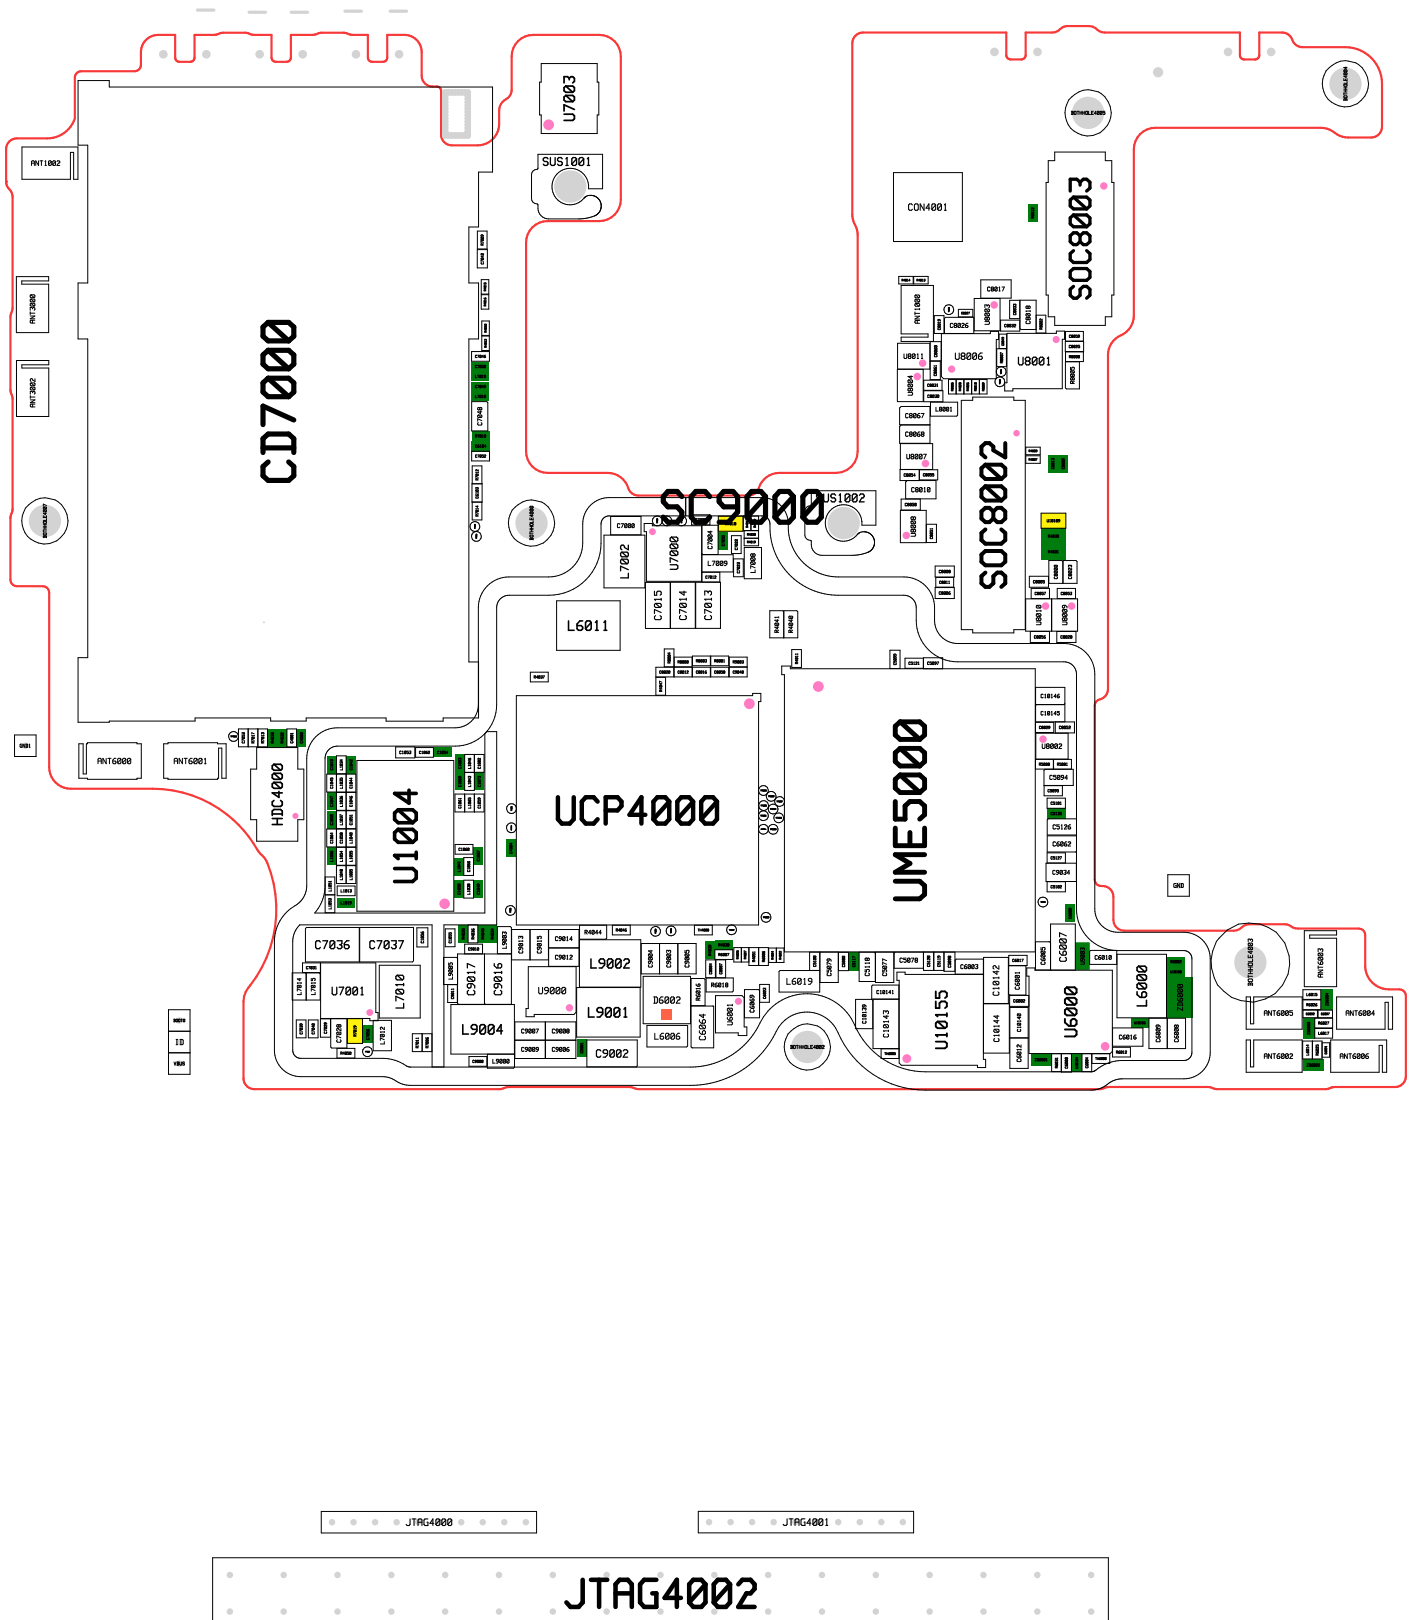

Model :
Revision :
Manufacture Count :
Charge :
Contact :
Date :
Routing :
Resin :

VX_SETUP(2020-11-25)_HHP


Created date of PCB data : 2021/1/7 16:23:56

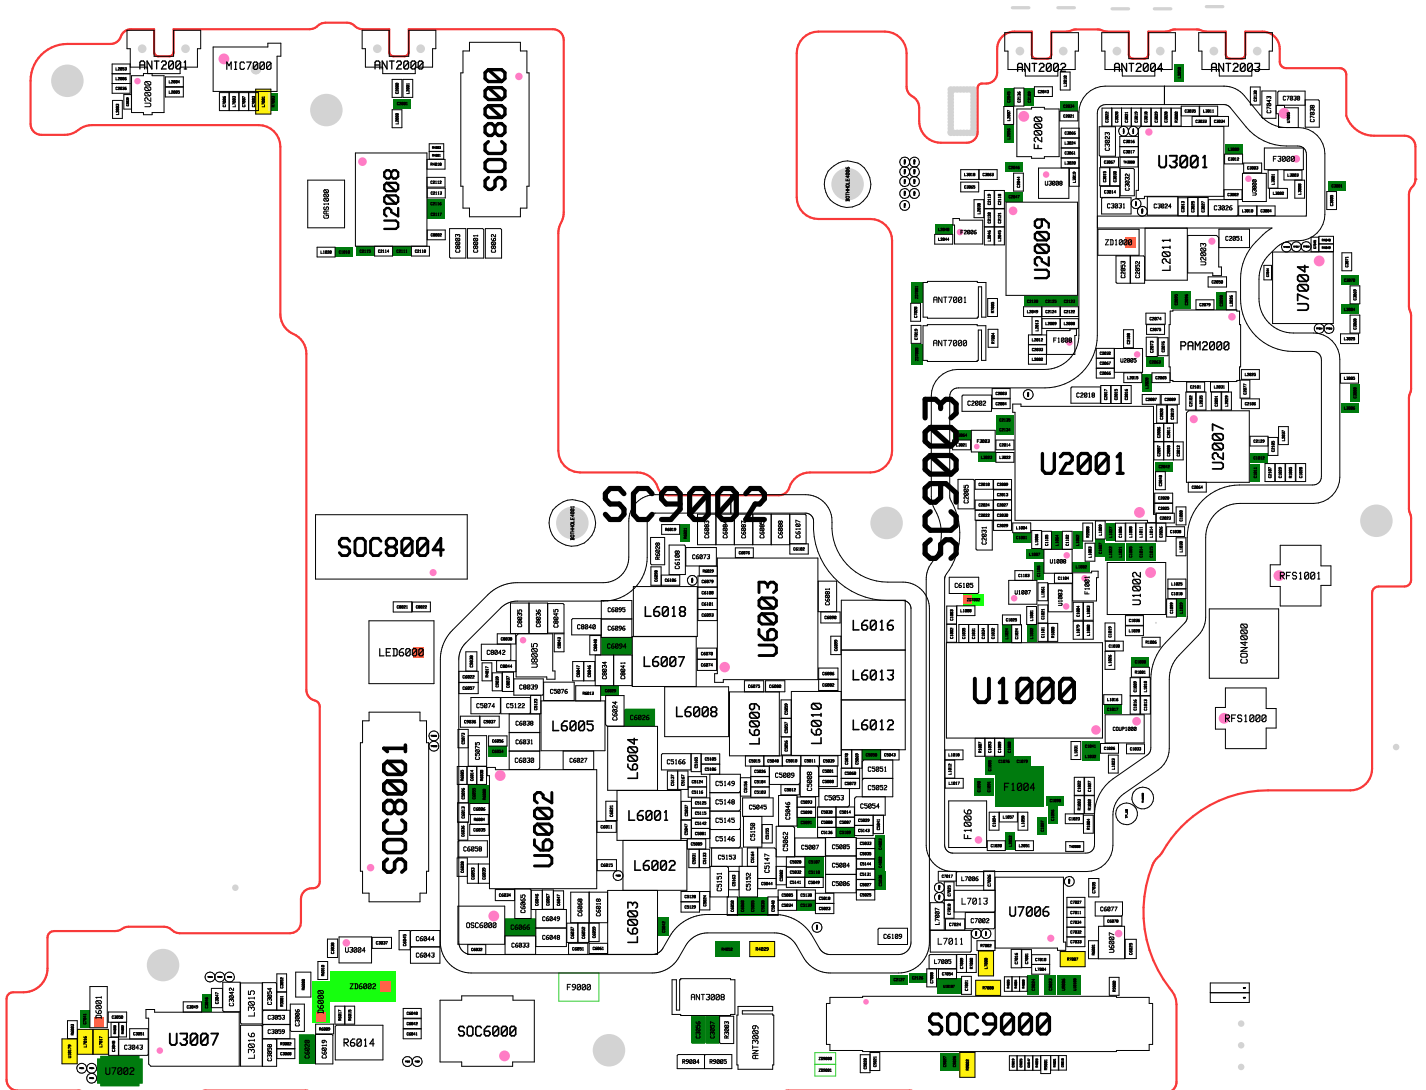

Model :
Revision :
Manufacture Count :
Charge :
Contact :
Date :
Routing :
Resin :


VX_SETUP(2020-11-25)_HHP

Created date of PCB data : 2020/12/18 10:41:14

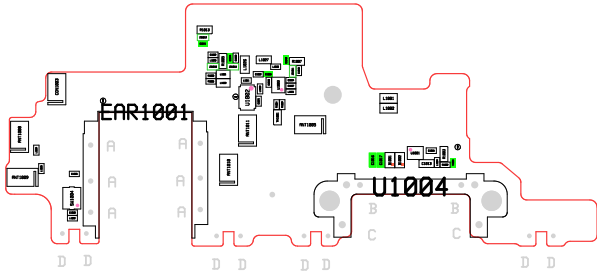

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

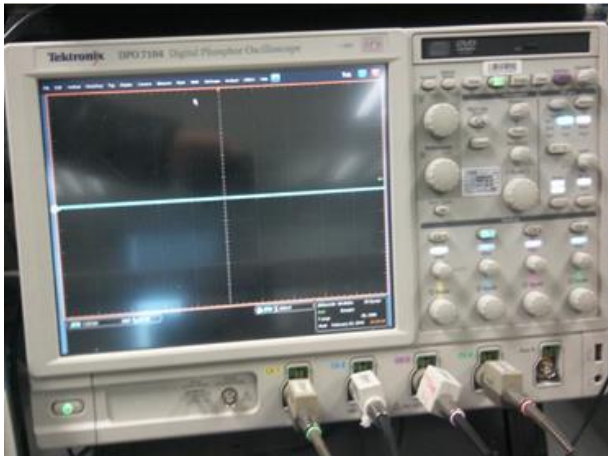

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

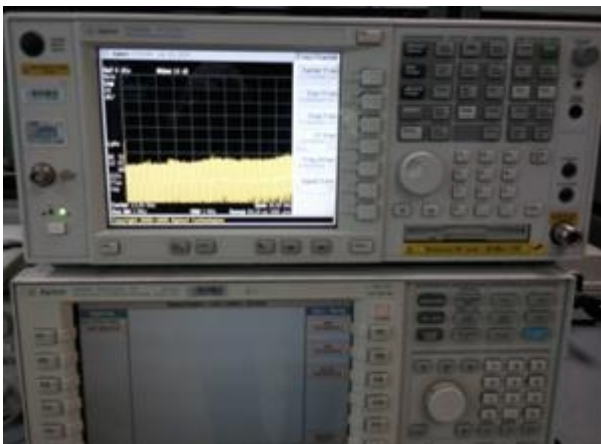


8960 & Spectrum Analyzer



Soldering iron


8. Level 3 Repair

8-4-1. Power On

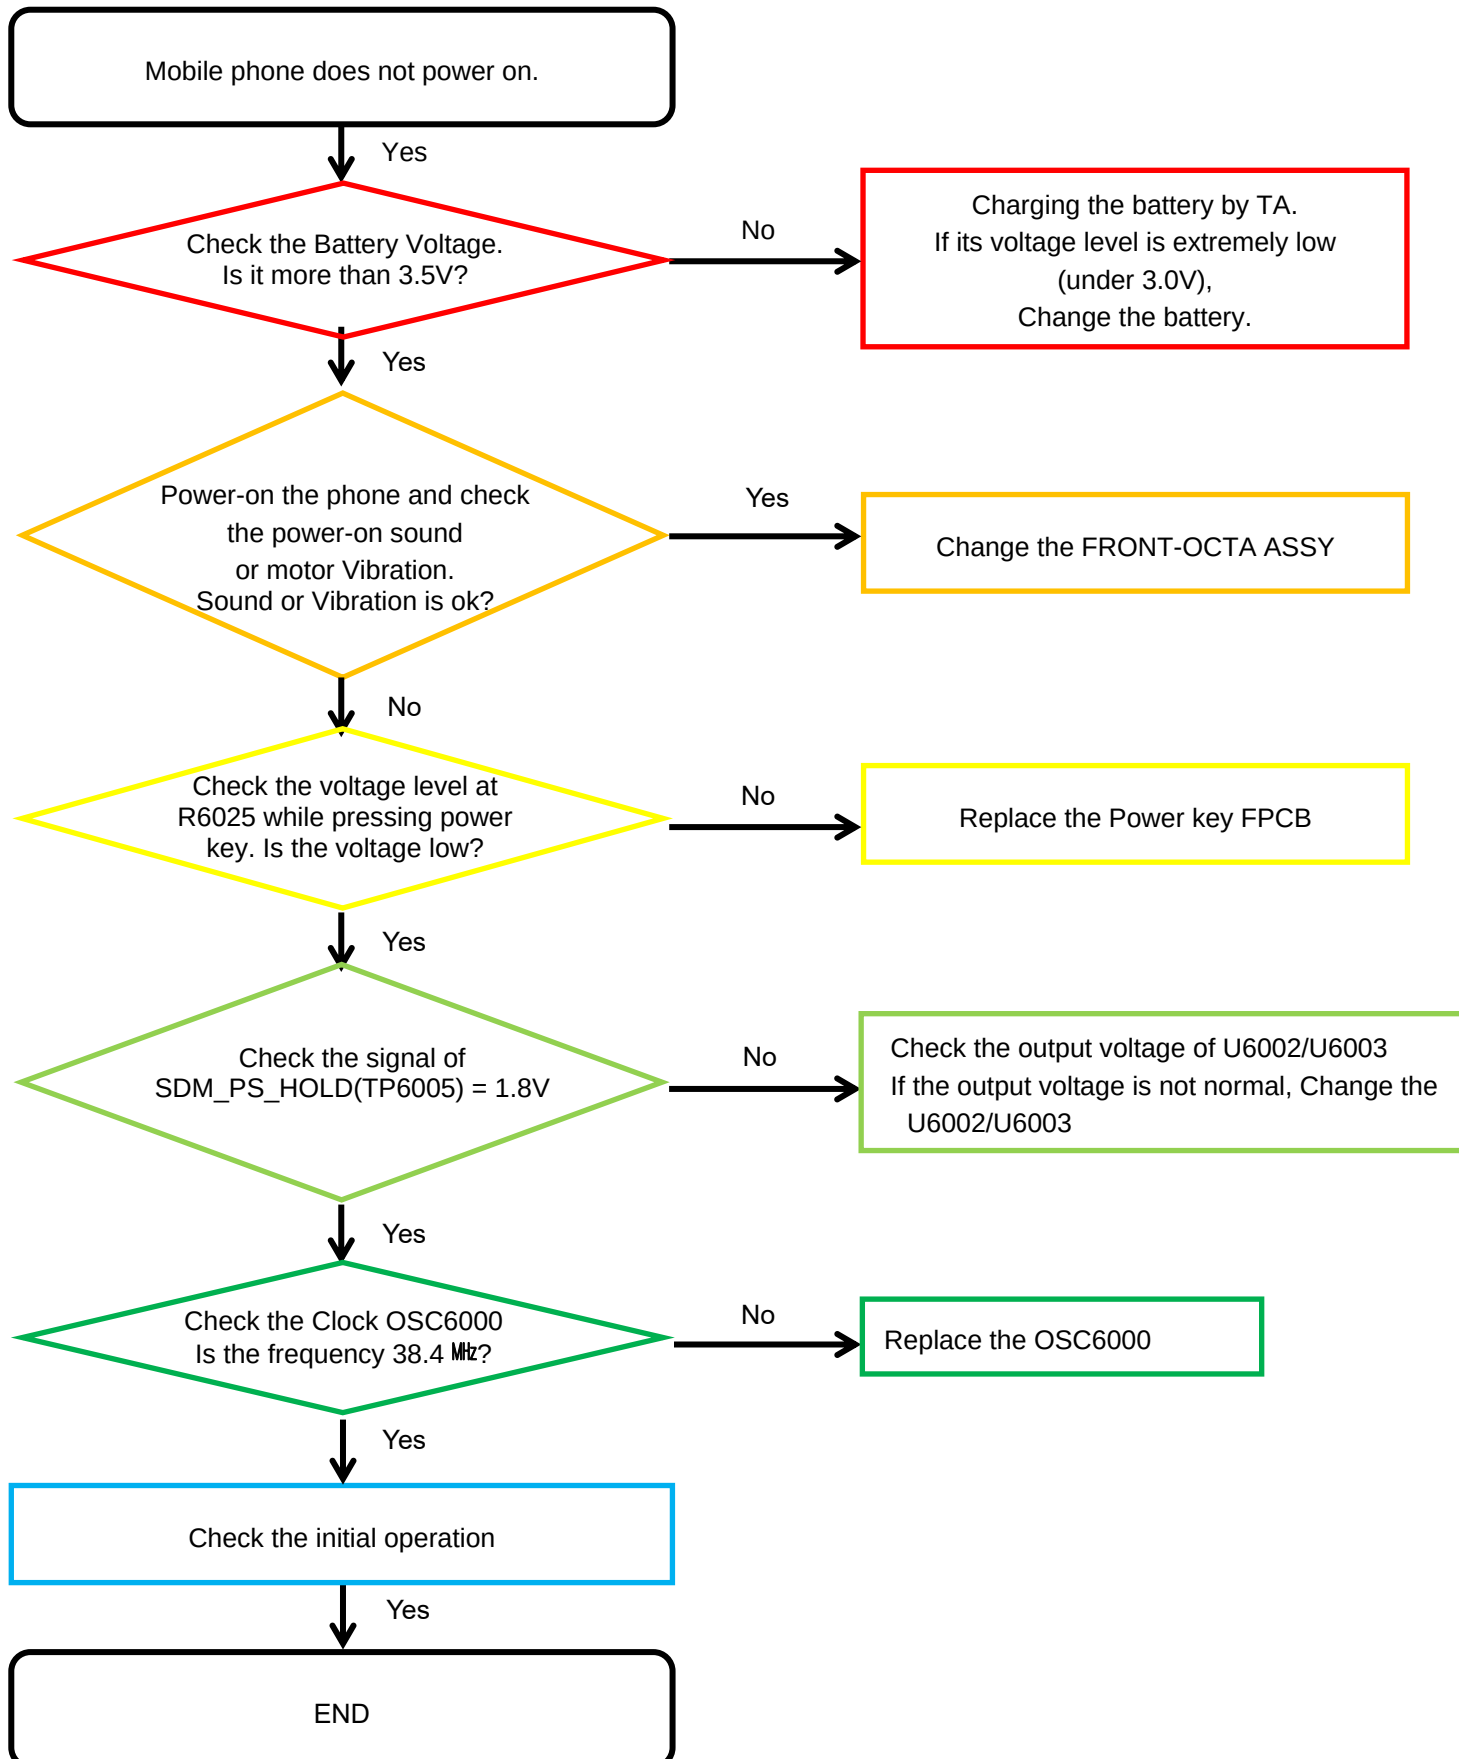


8. Level 3 Repair

8-4-2. Initial

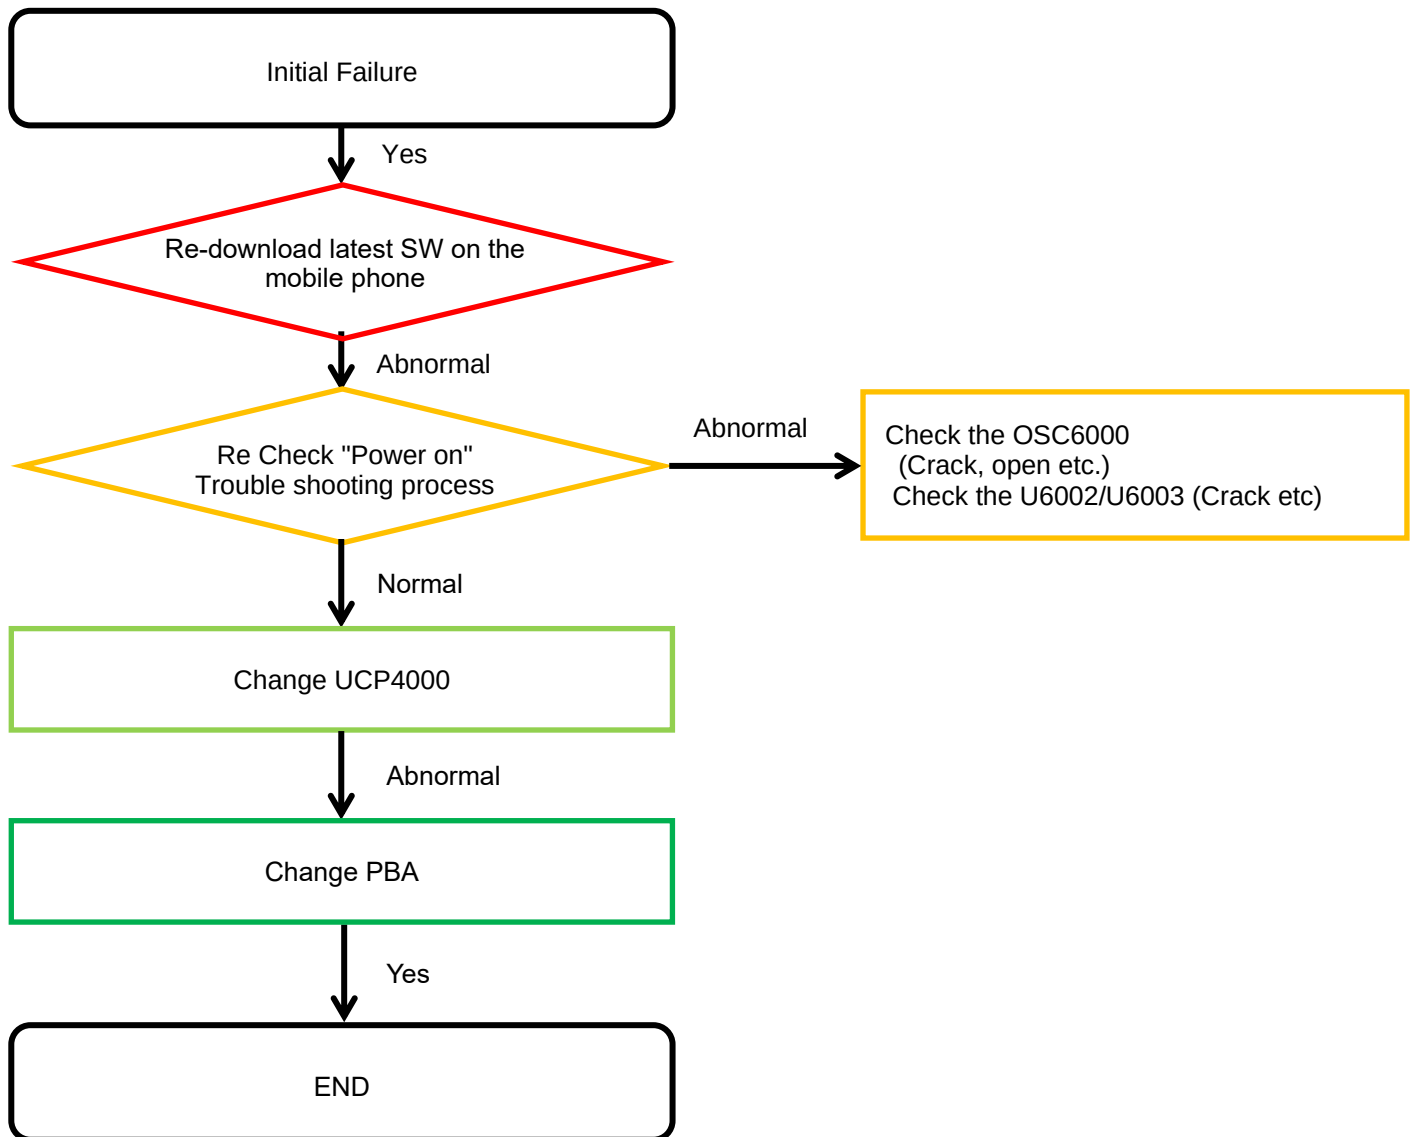


8. Level 3 Repair

8-4-3. No Service

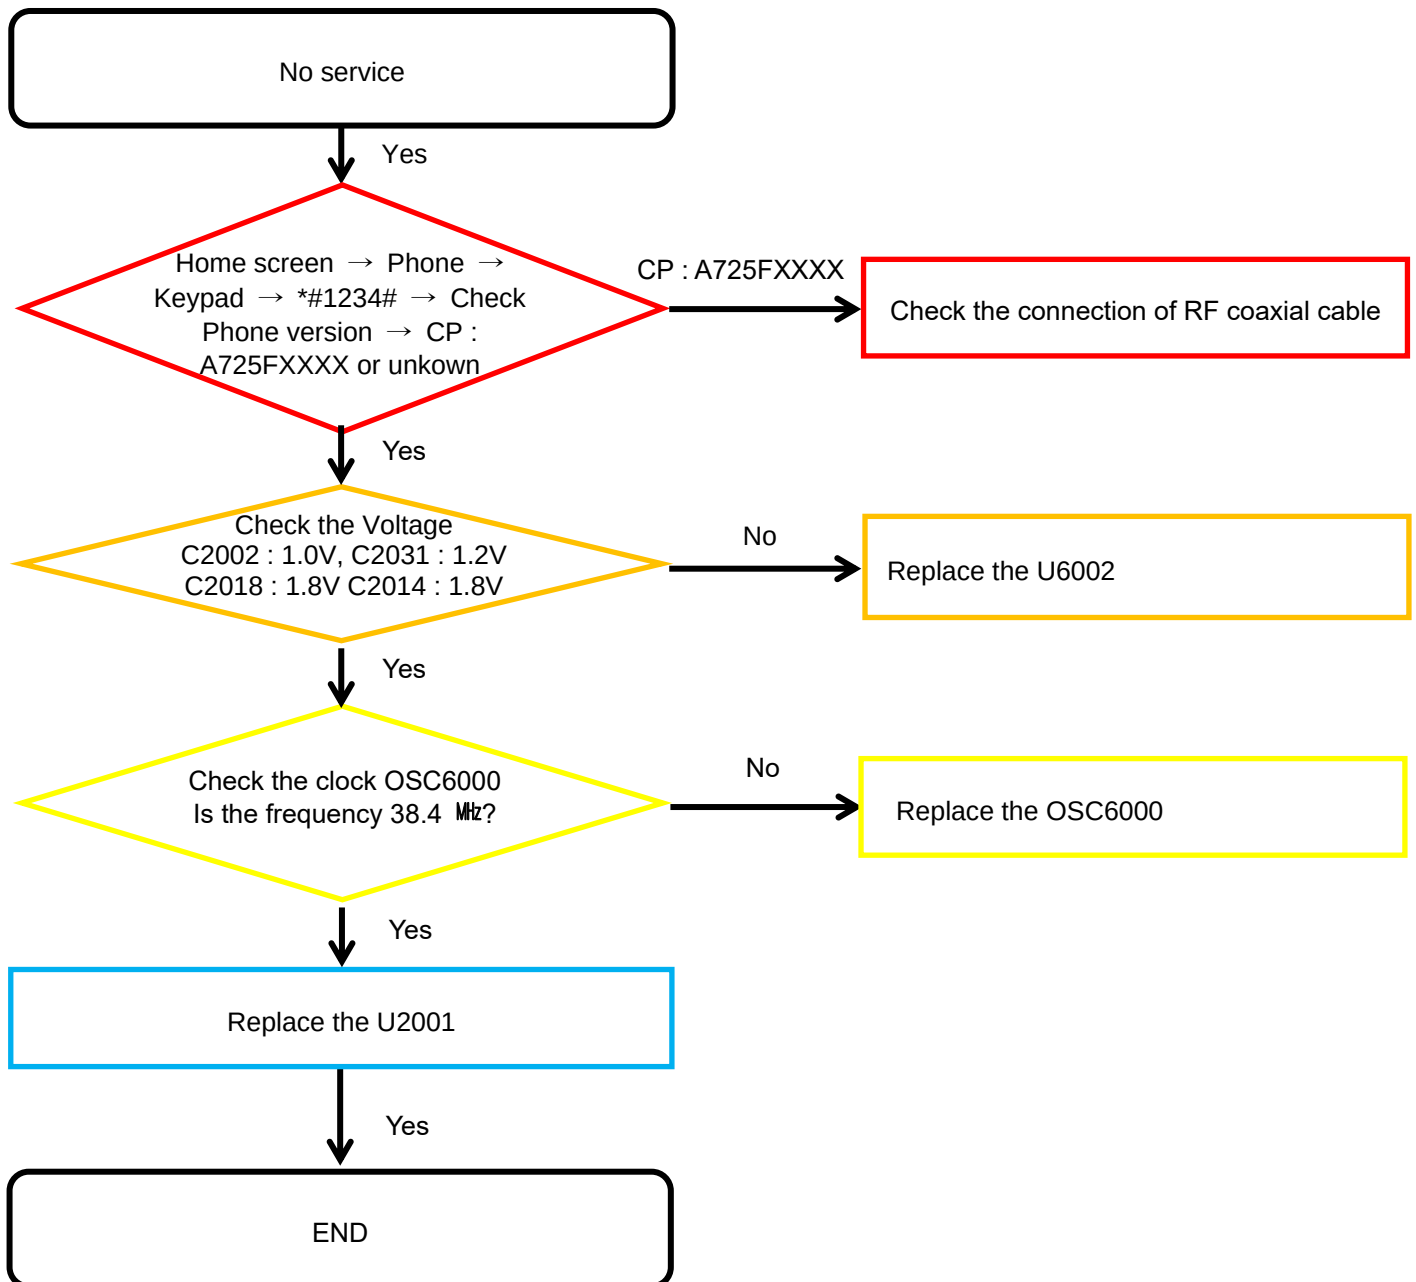


8. Level 3 Repair

8-4-4. SIM Part

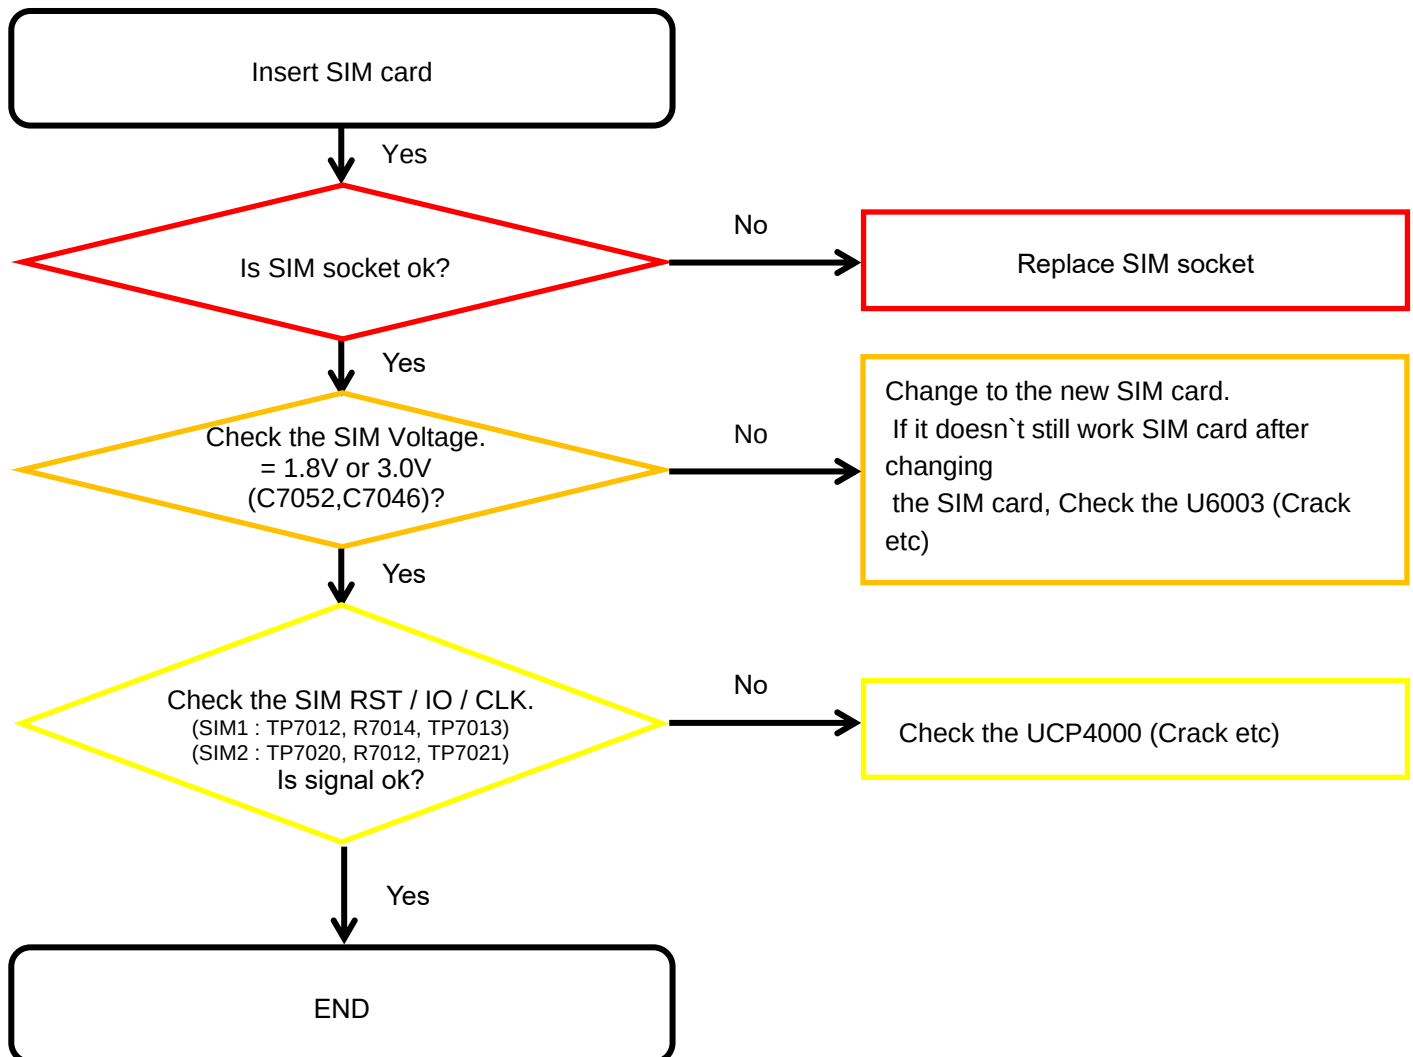


8. Level 3 Repair

8-4-5. T-Flash Part

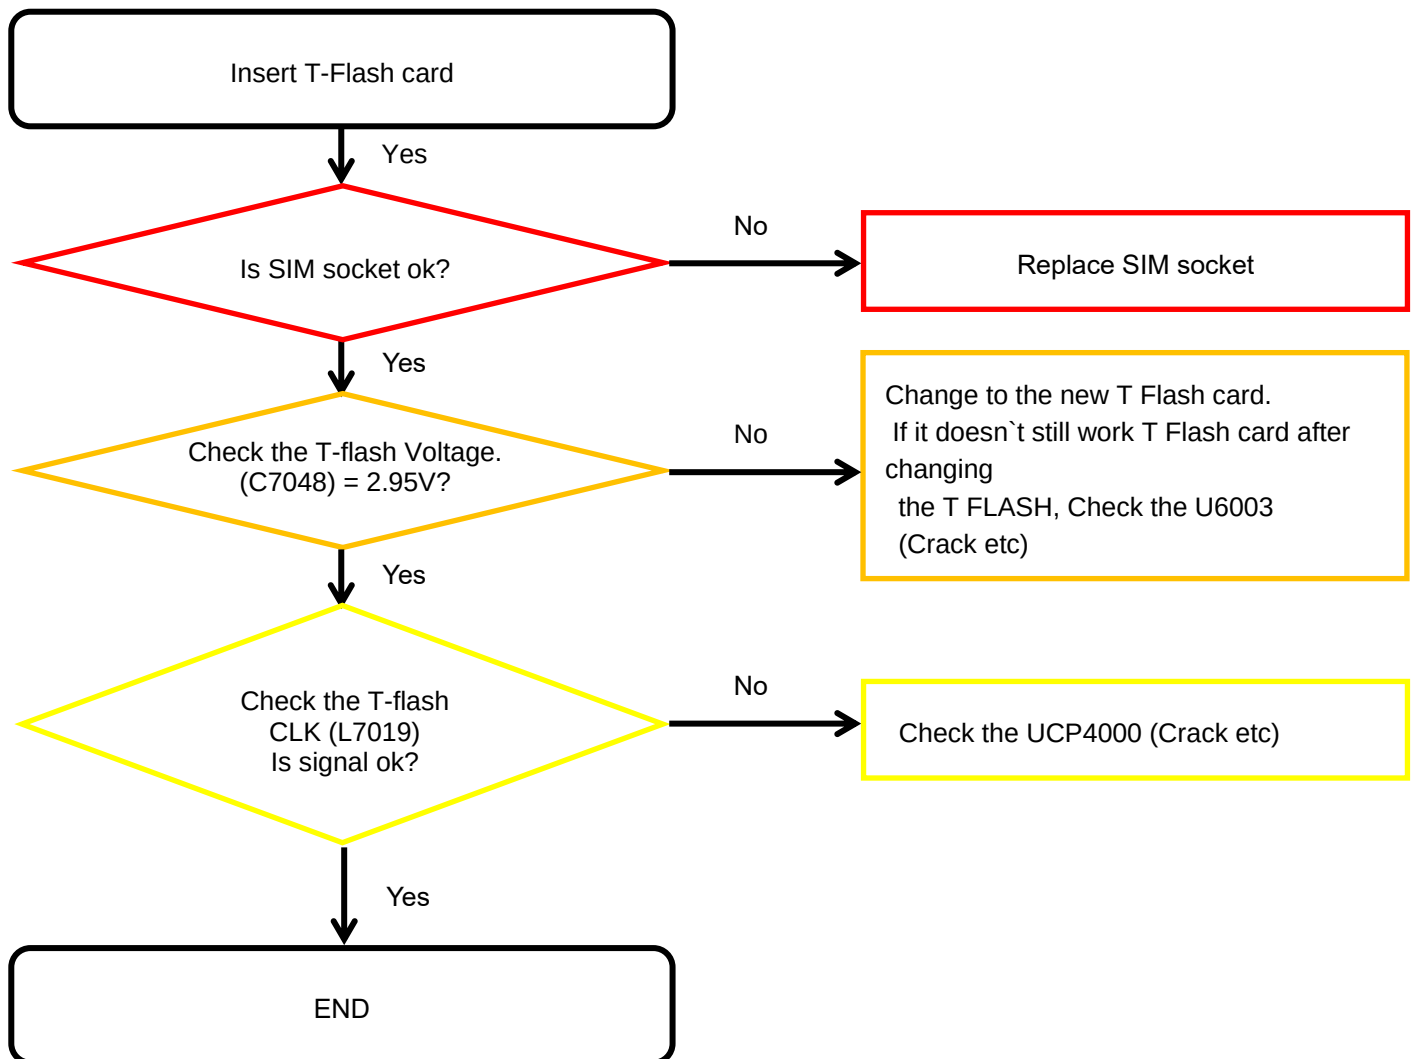


8. Level 3 Repair

8-4-6. Cable Charging Part

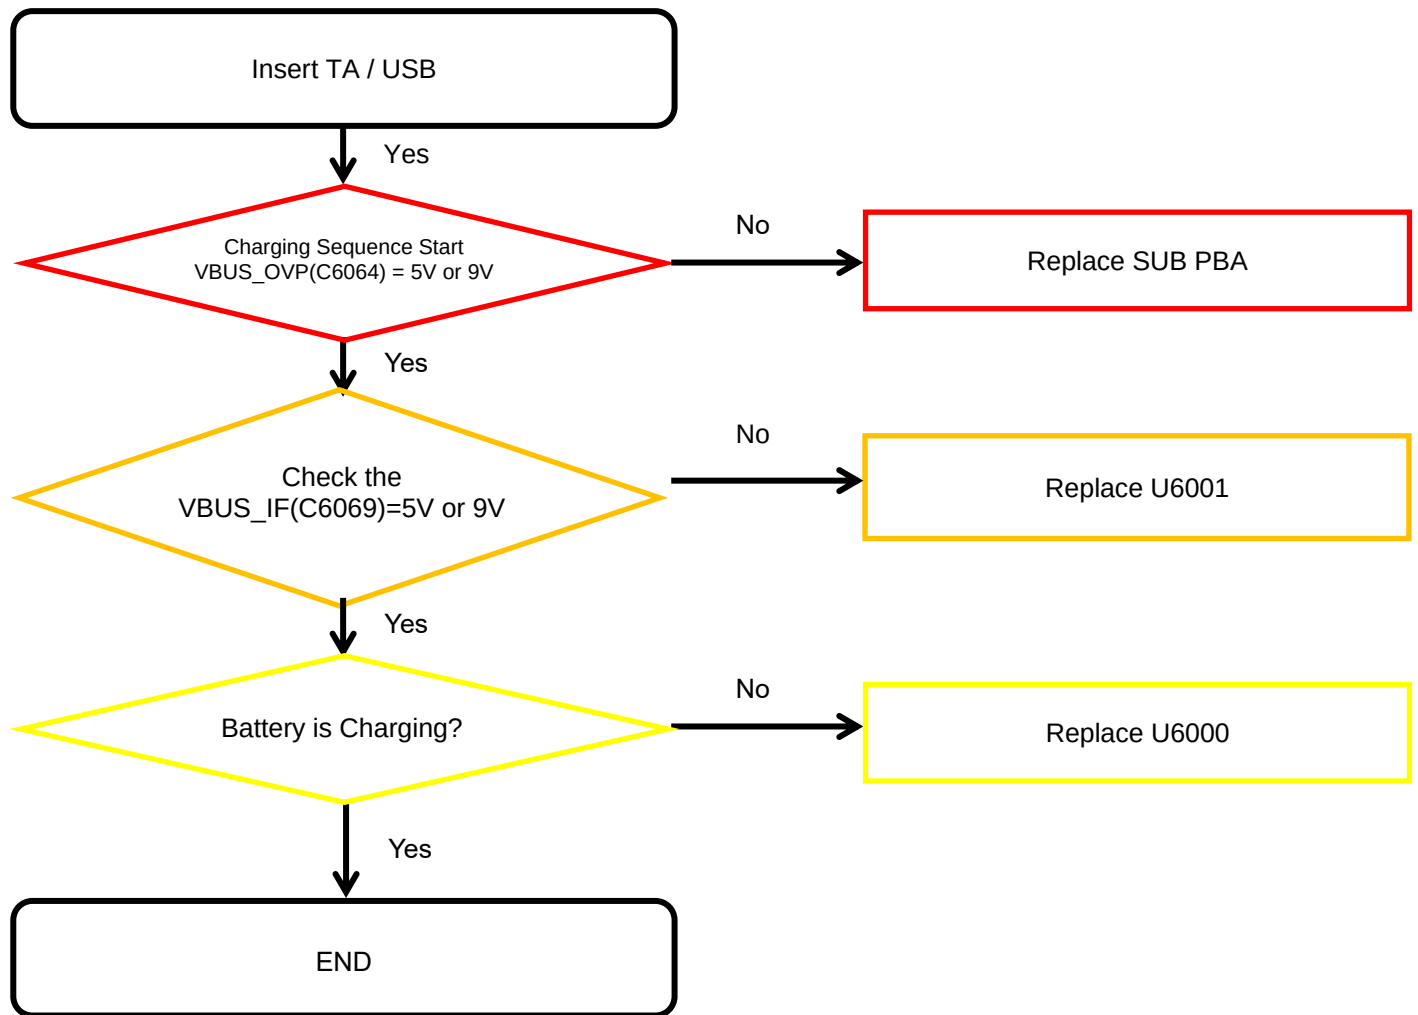


8. Level 3 Repair

8-4-7. OTG

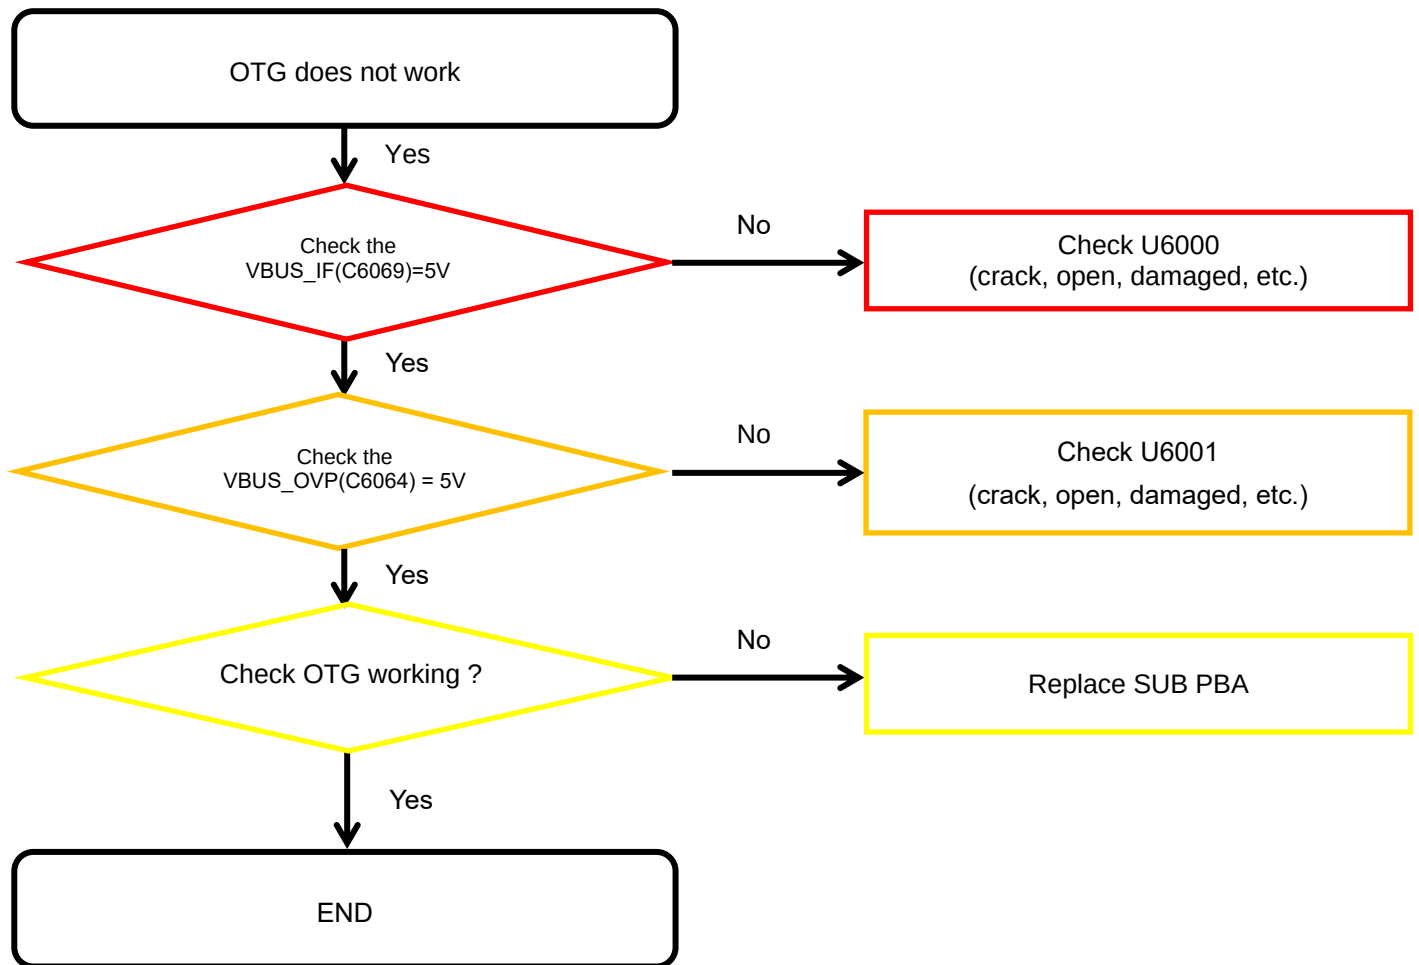


8. Level 3 Repair

8-4-8-1. Magnetic Sensor

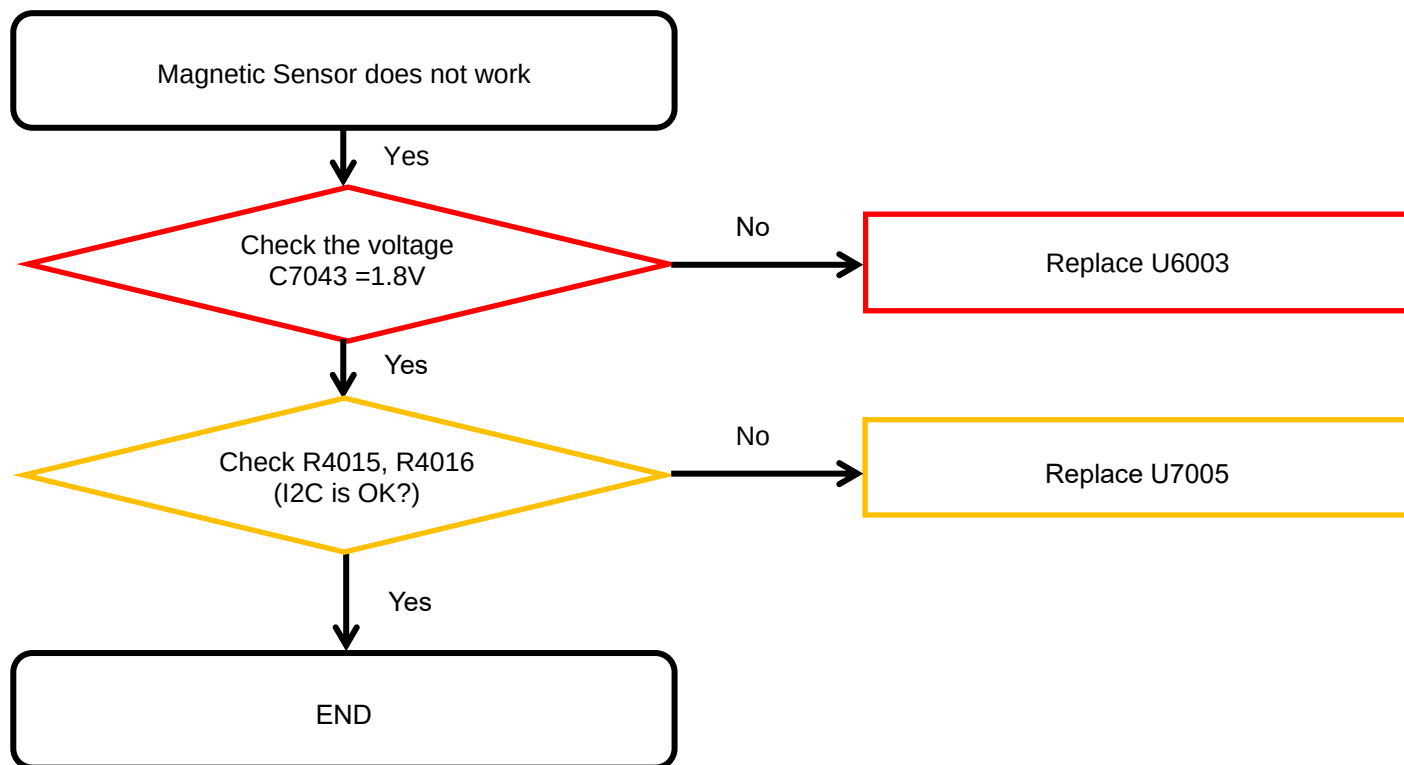


8. Level 3 Repair

8-4-8-2. 6Axis Sensor

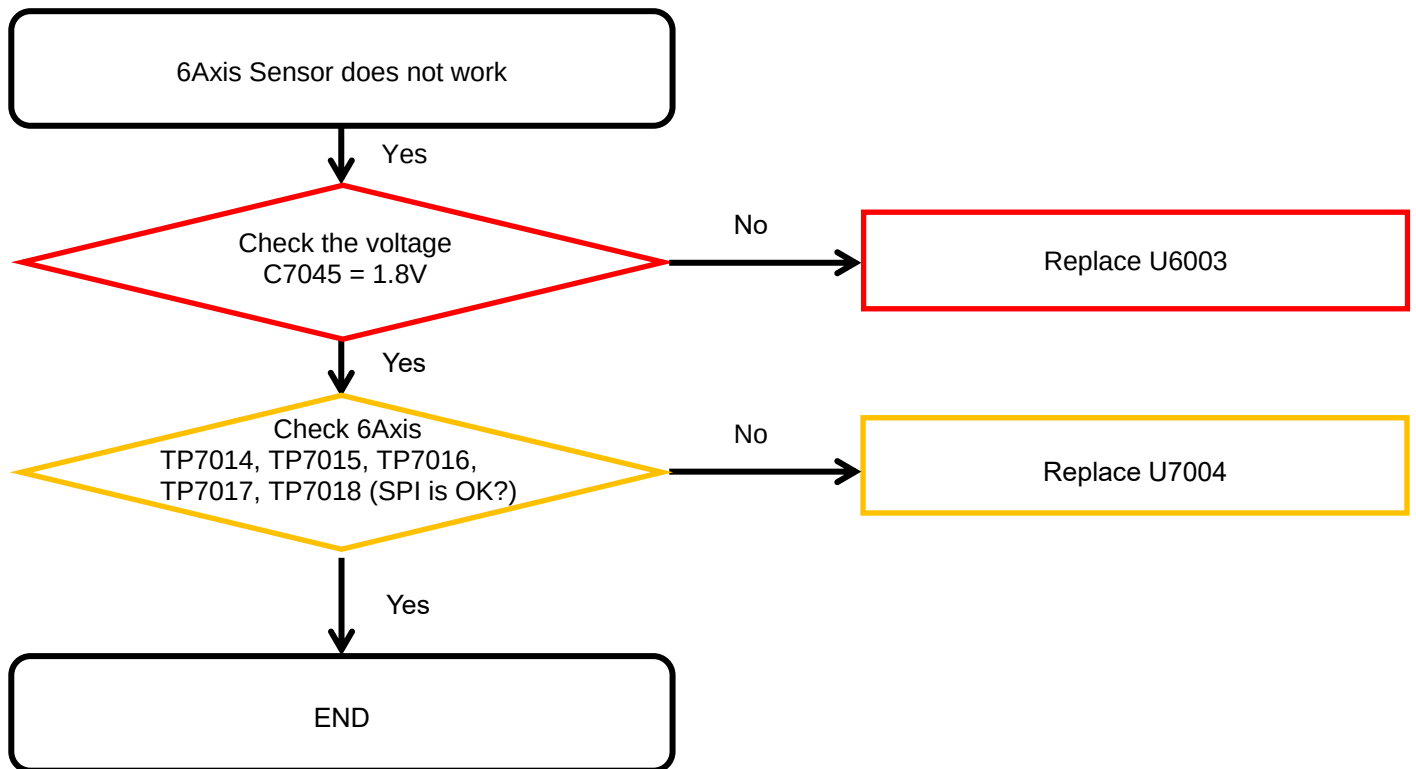


8. Level 3 Repair

8-4-8-3. Fingerprint Sensor

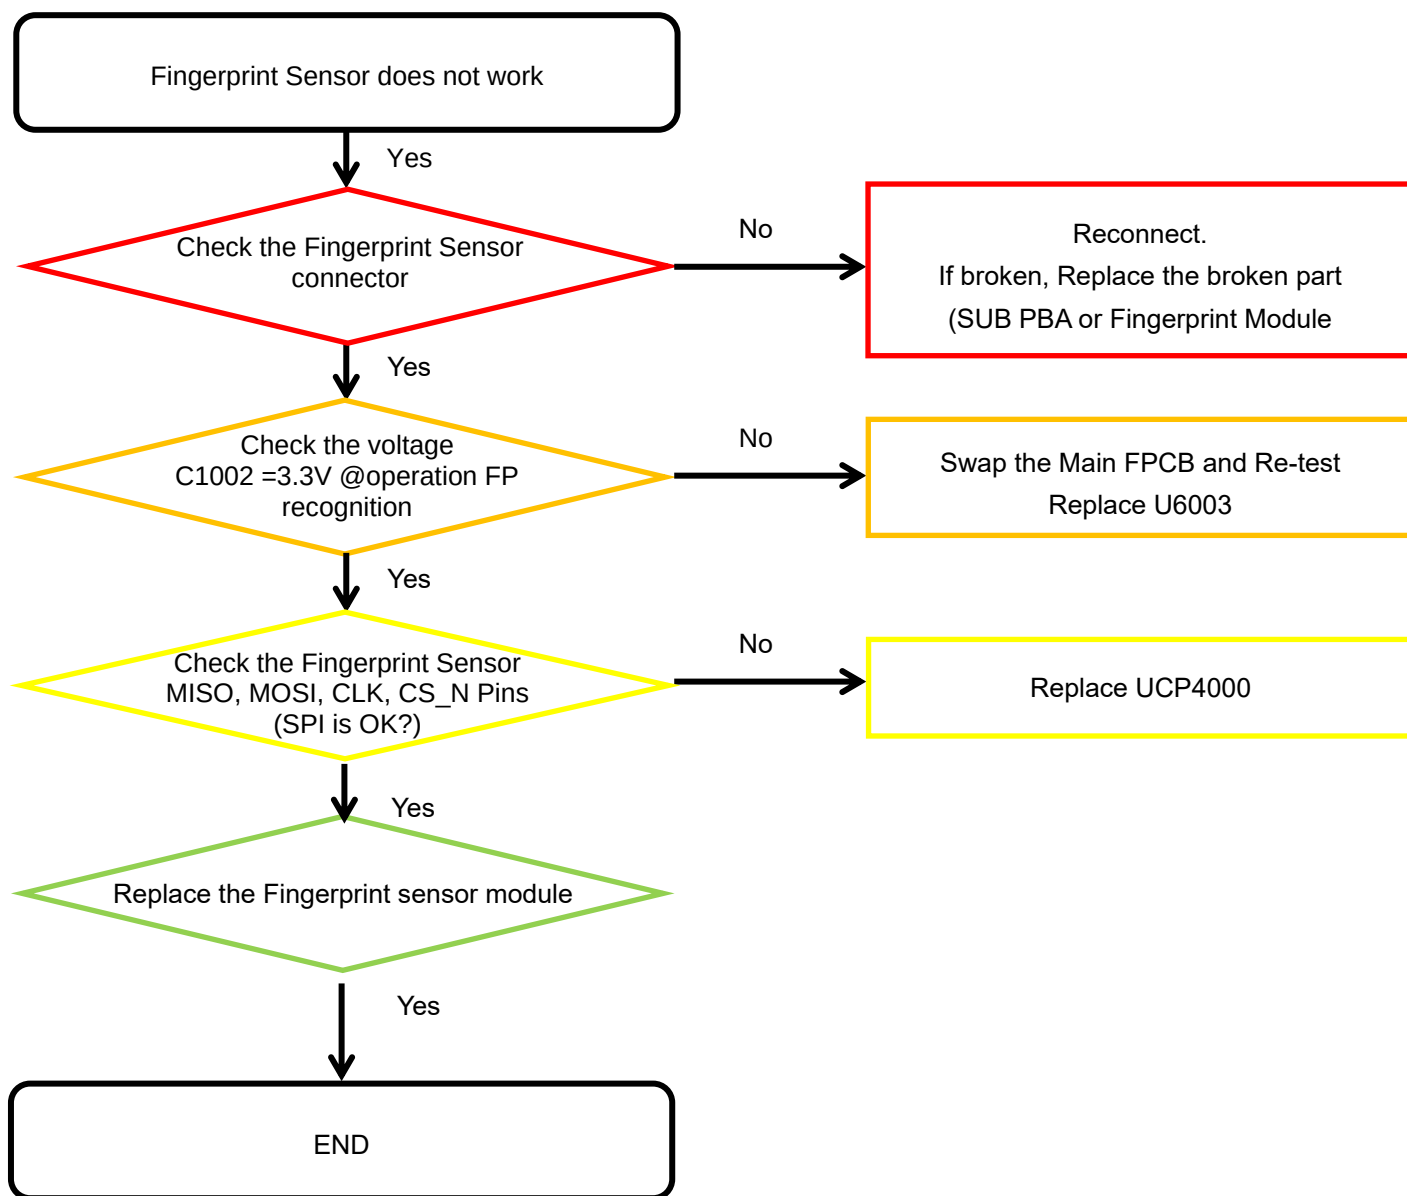


8. Level 3 Repair

8-4-8-4. Light Sensor

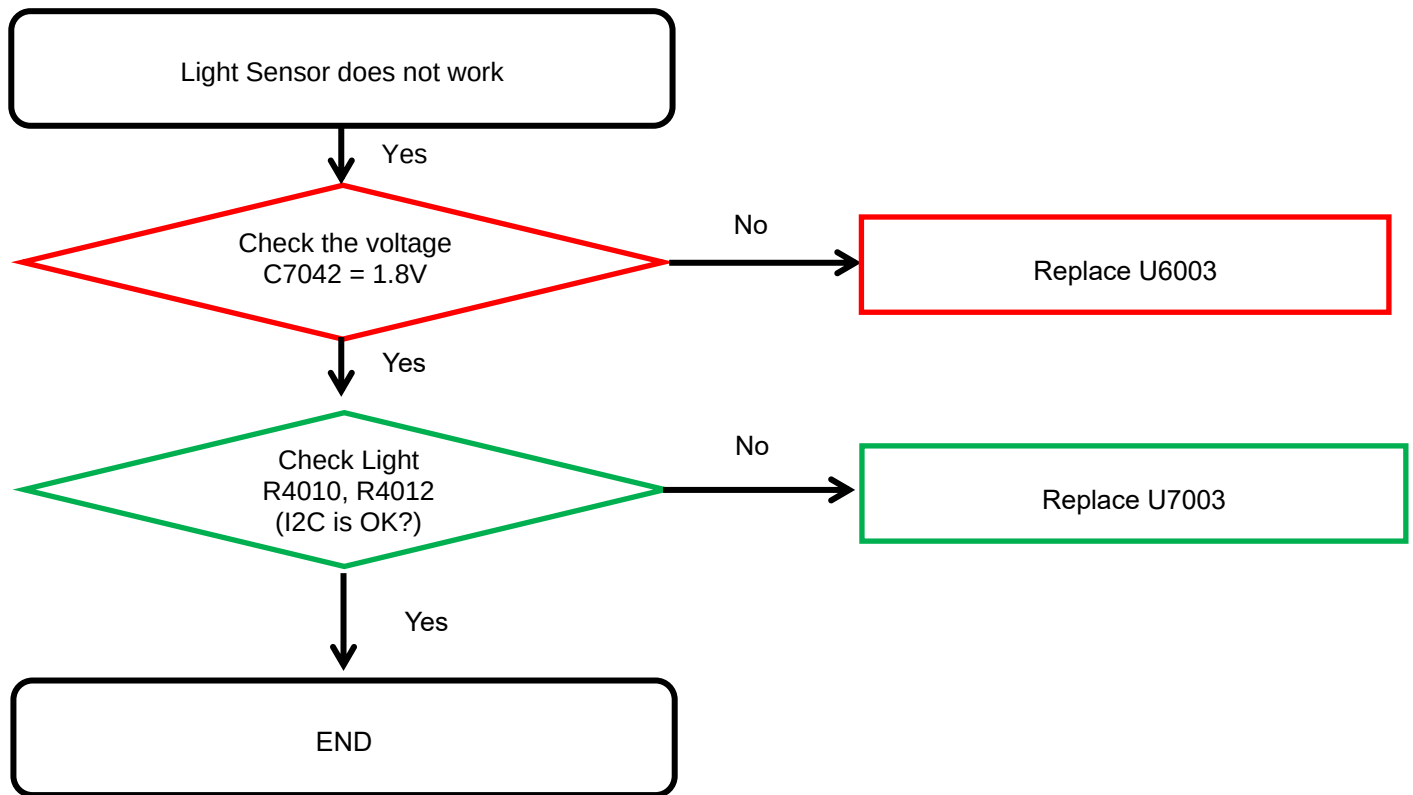


8. Level 3 Repair

8-4-9-1. Microphone Part - Main MIC

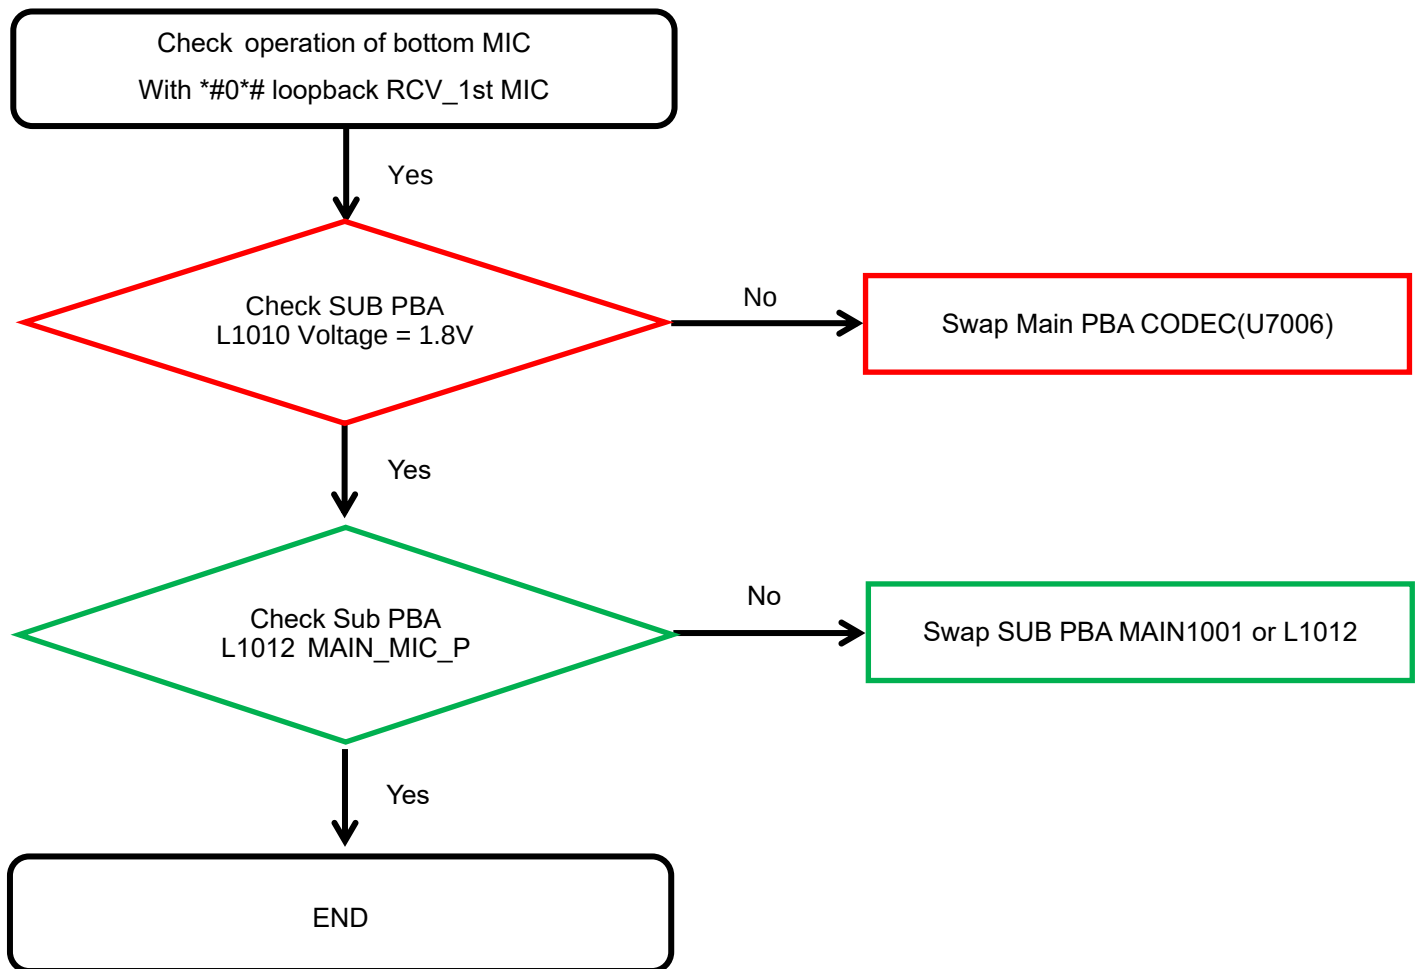


8. Level 3 Repair

8-4-9-2. Microphone Part - Sub(2nd) MIC

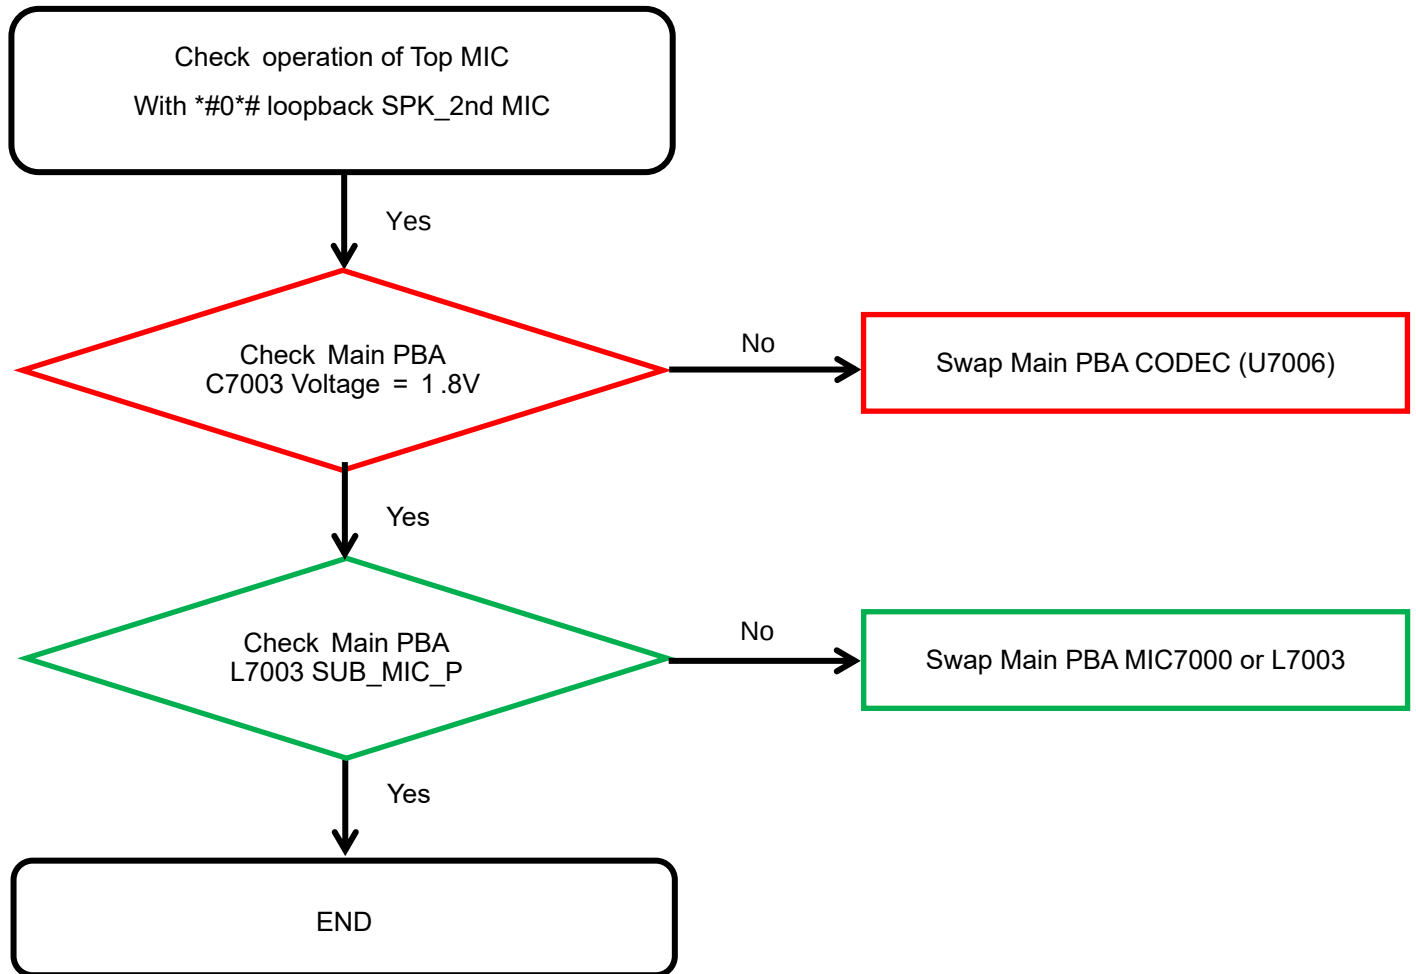


8. Level 3 Repair

8-4-10. Speaker Part – Bottom Speaker

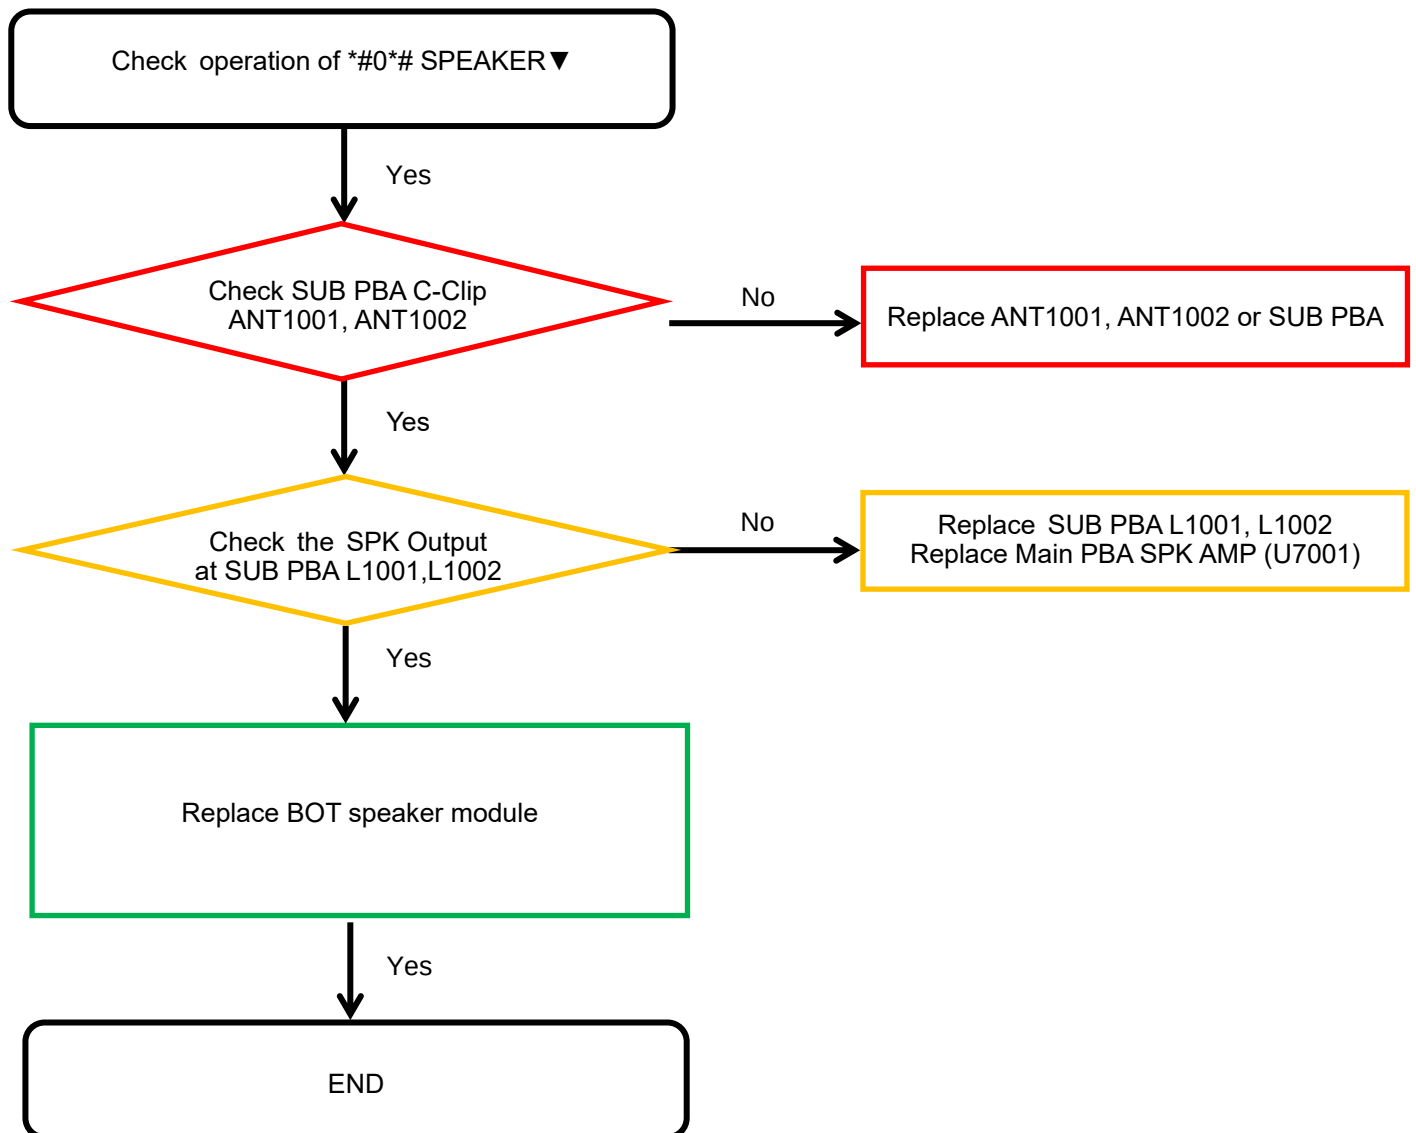


8. Level 3 Repair

8-4-11. Speaker Part – TOP Speaker

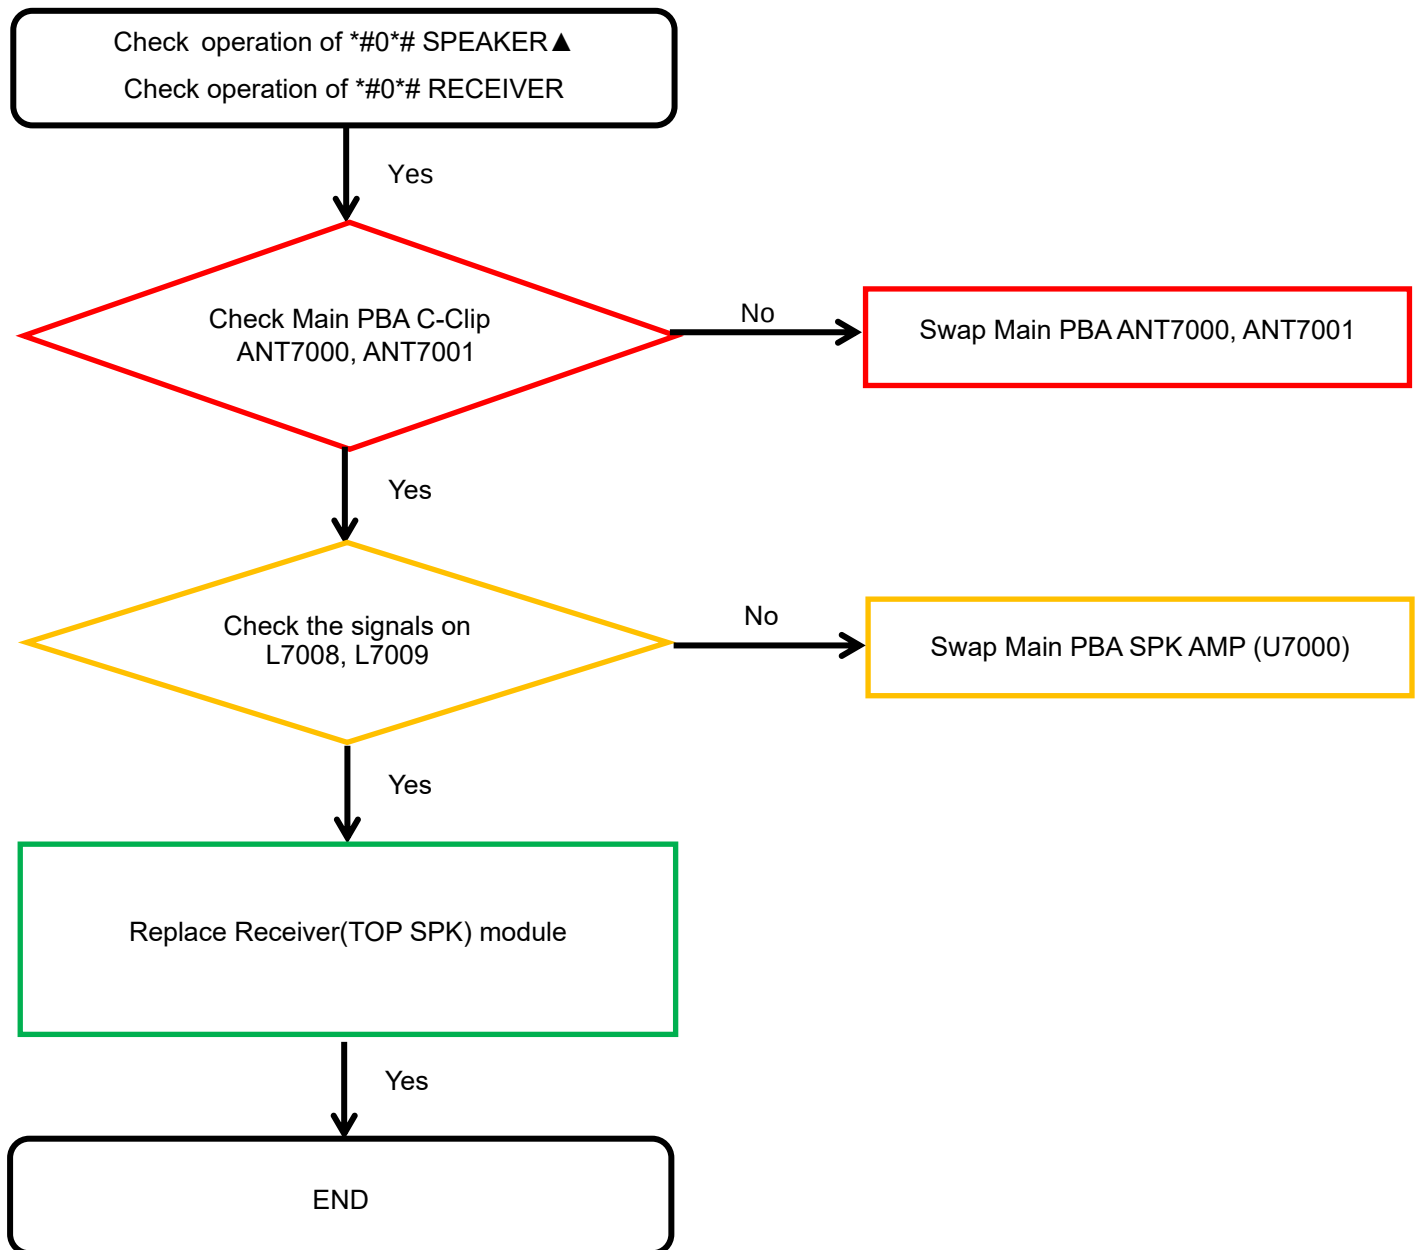


8. Level 3 Repair

8-4-12. BT/WIFI

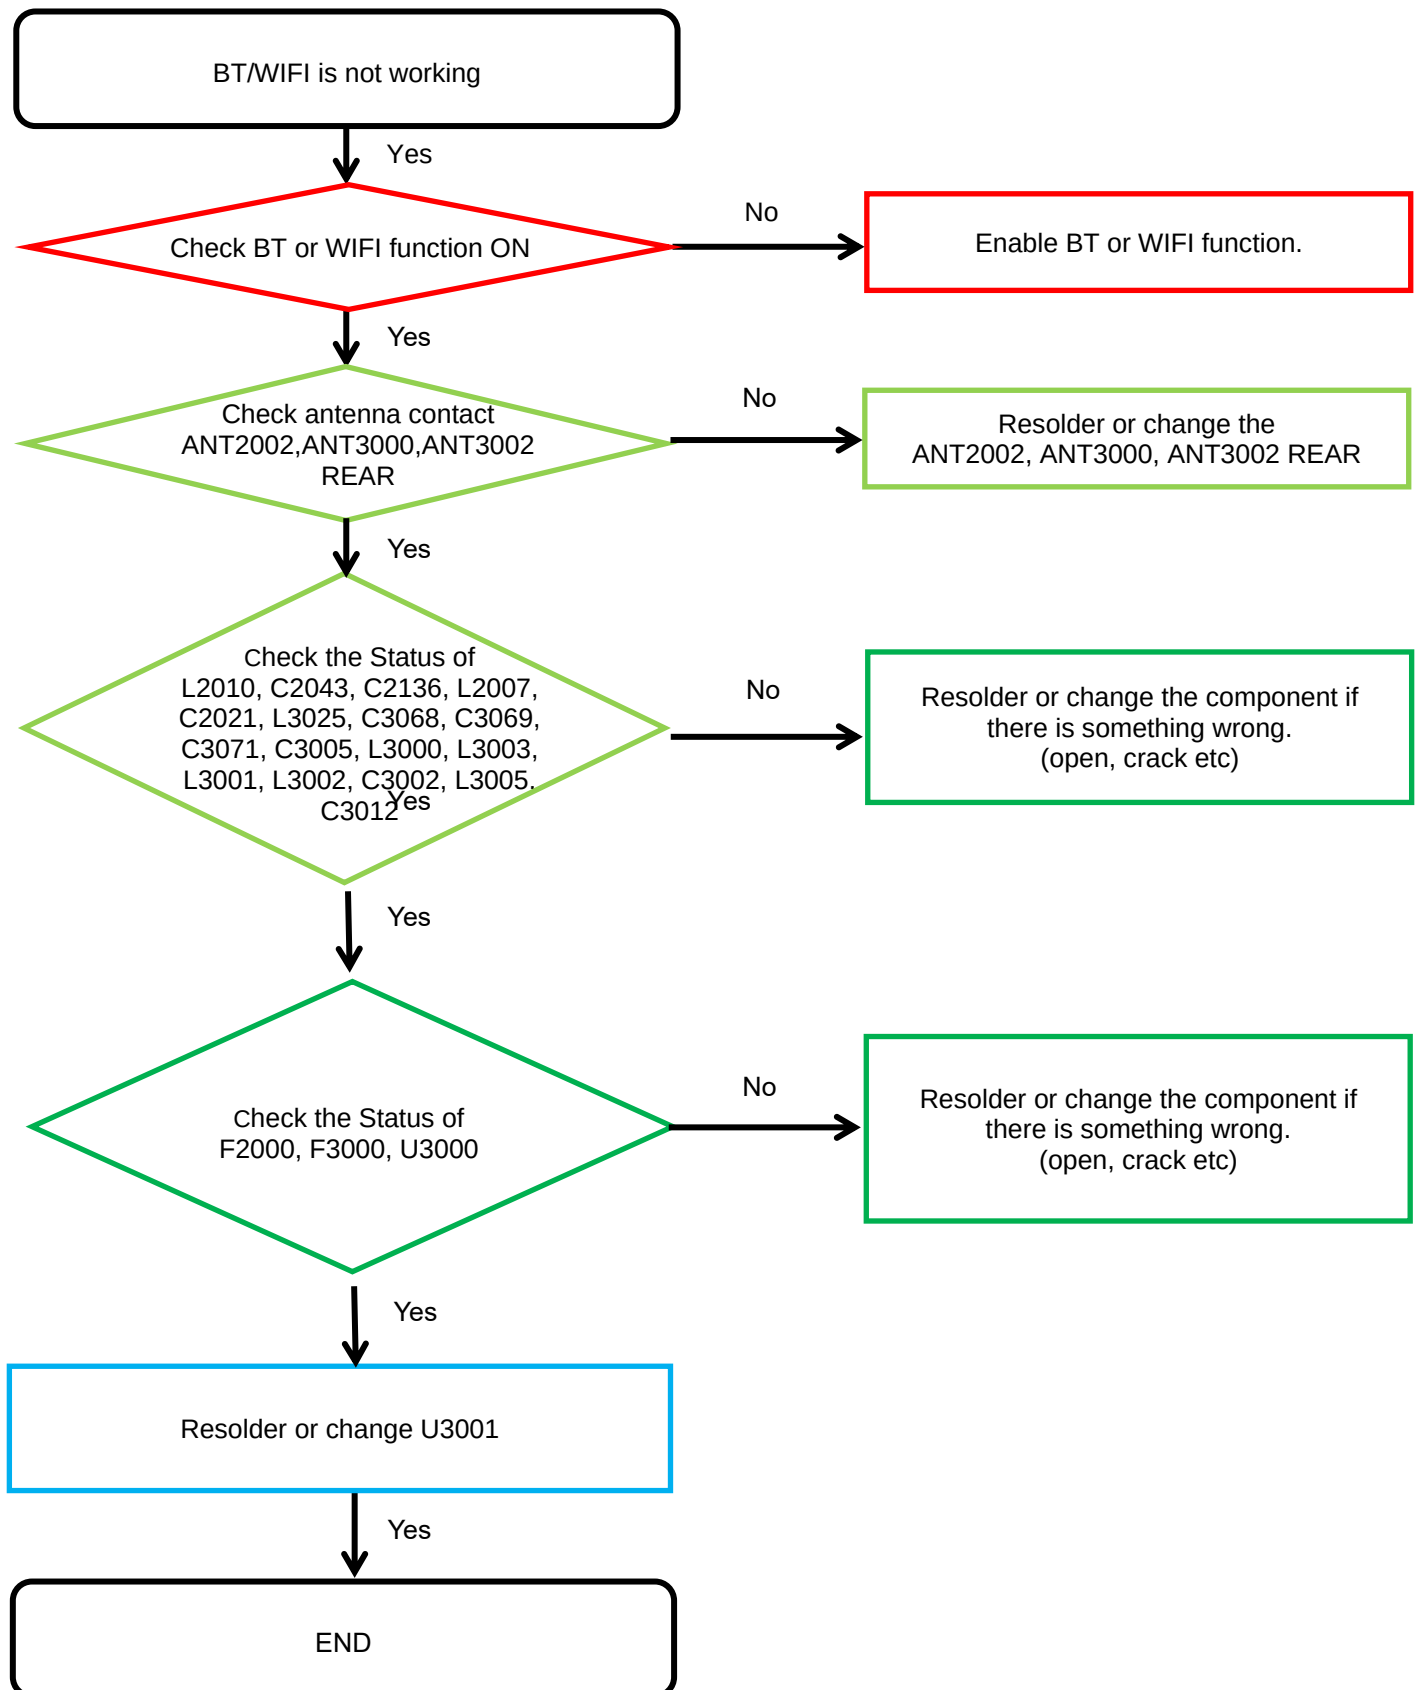


8. Level 3 Repair

8-4-13. GPS

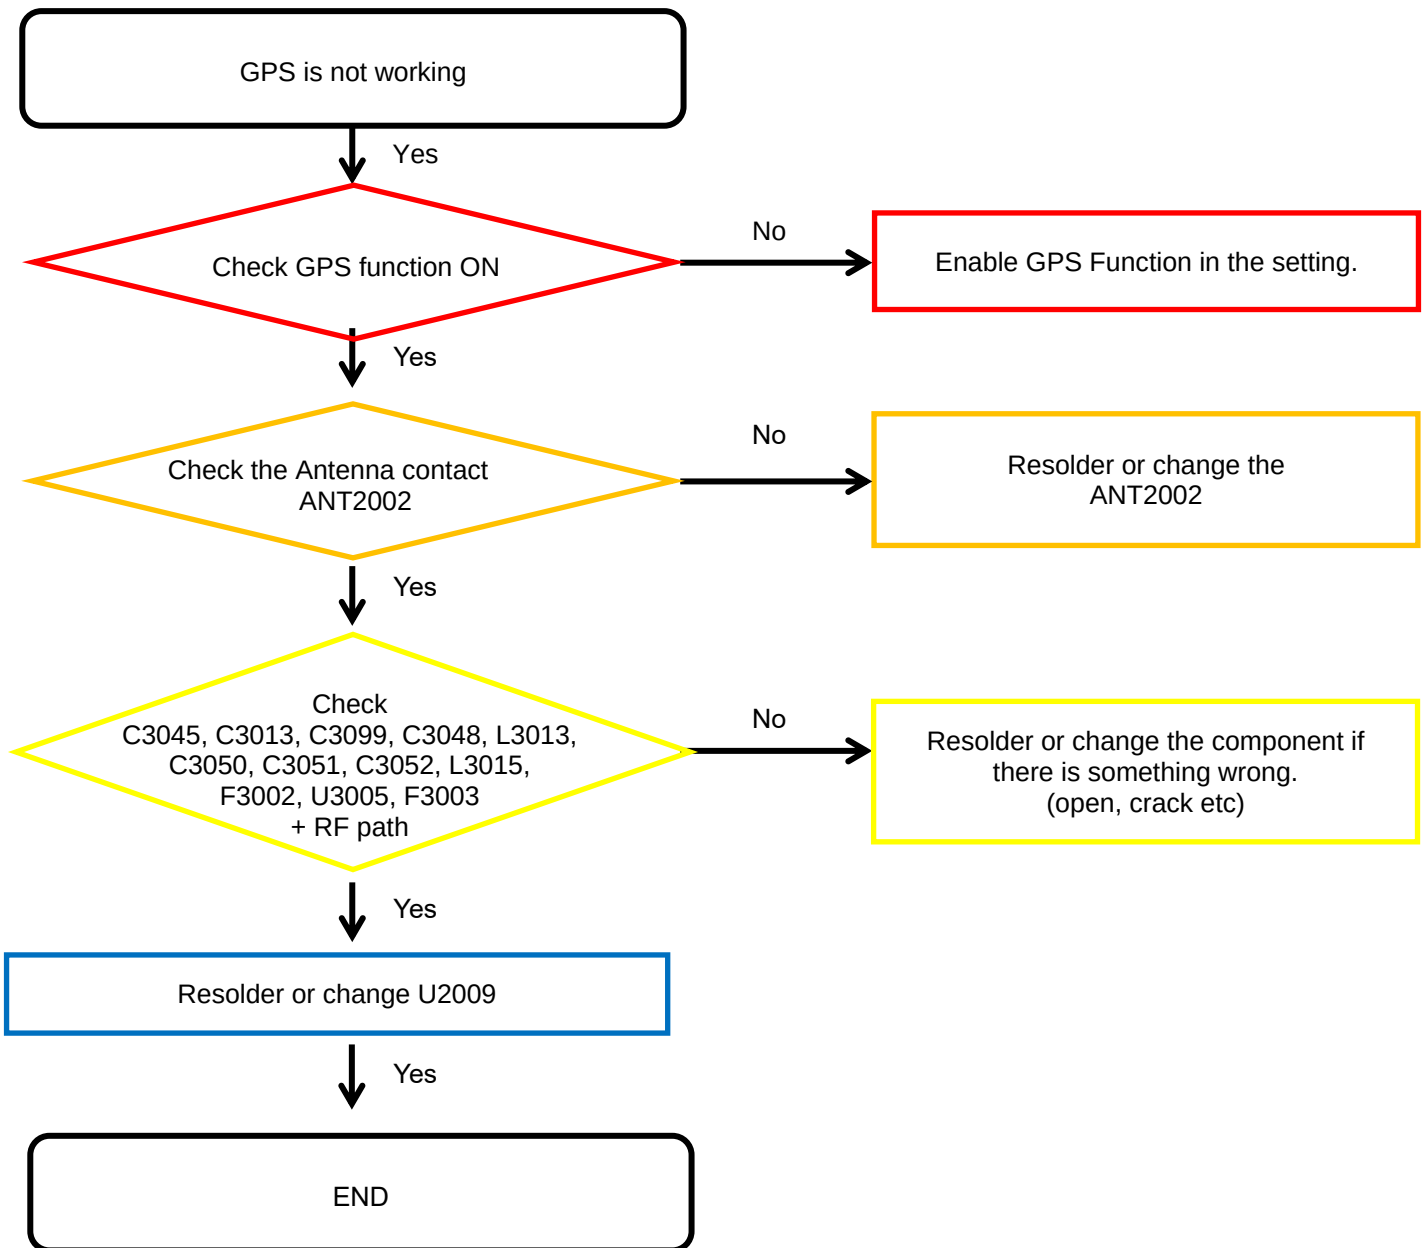


8. Level 3 Repair

8-4-14. NFC

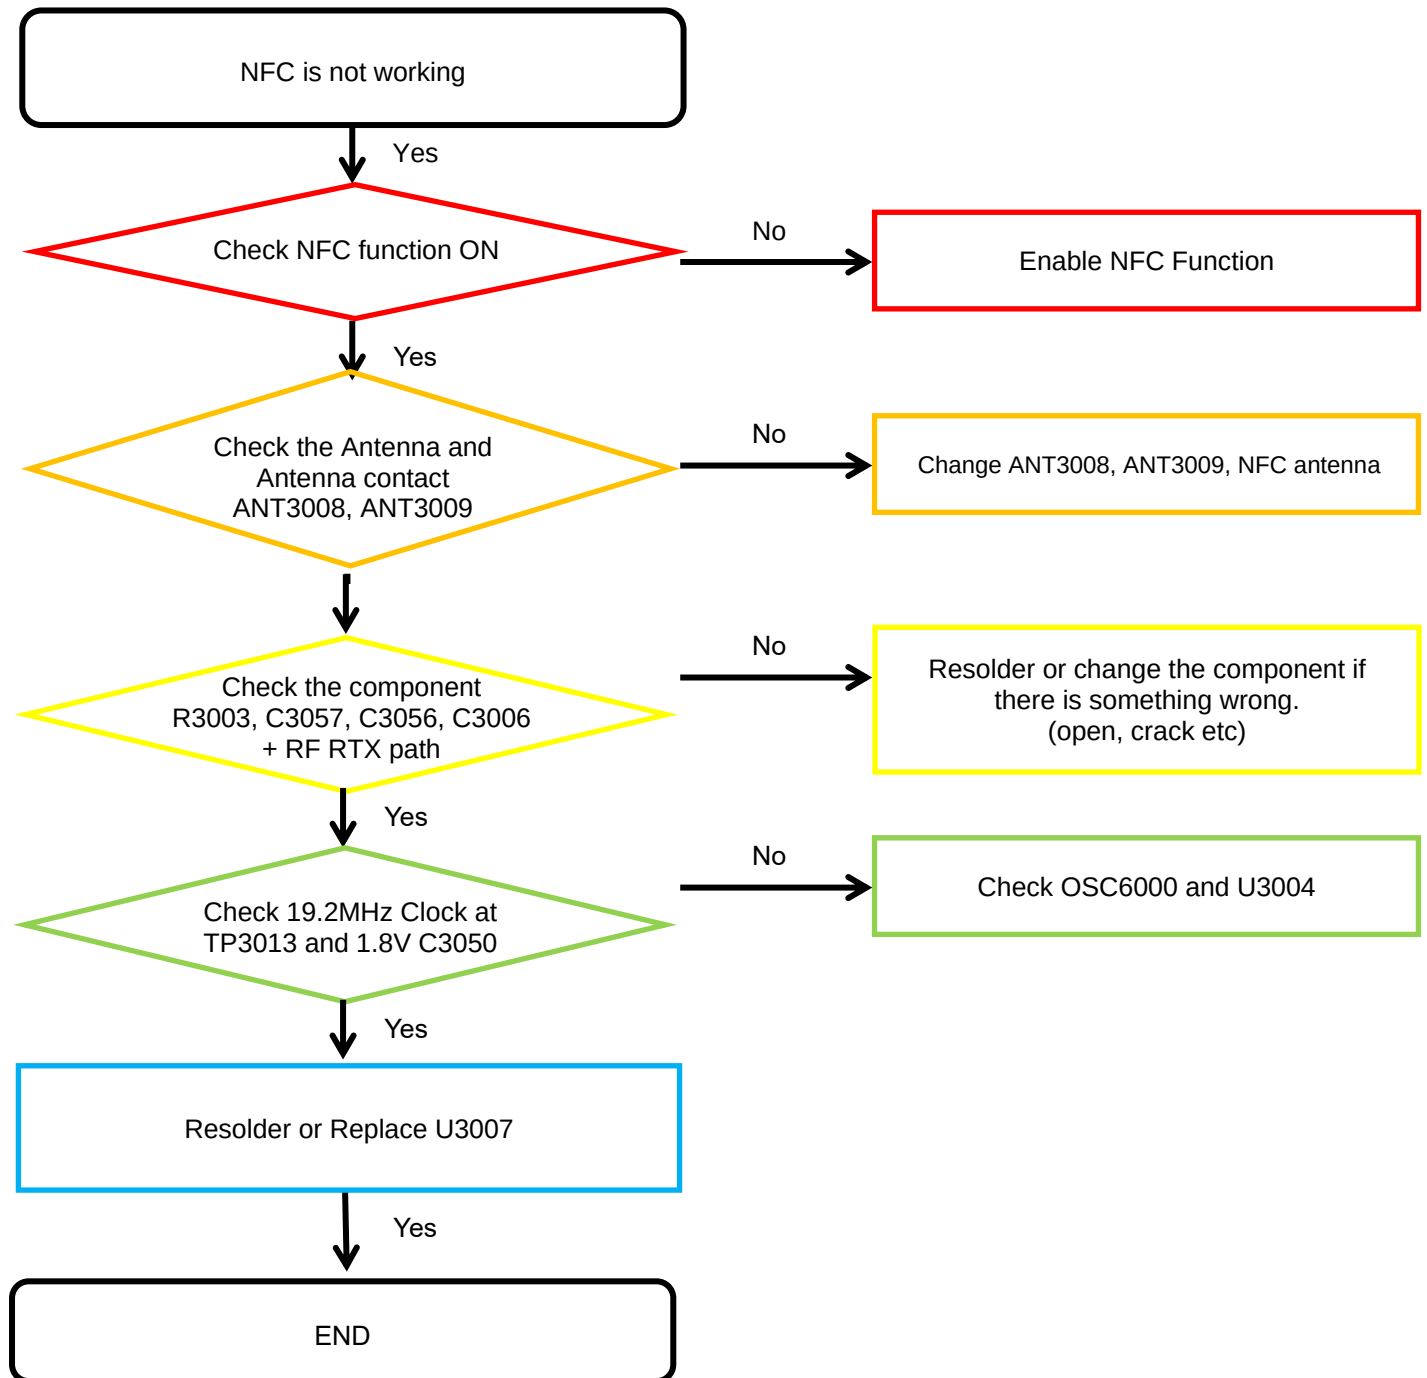


8. Level 3 Repair

8-4-15. FM radio part

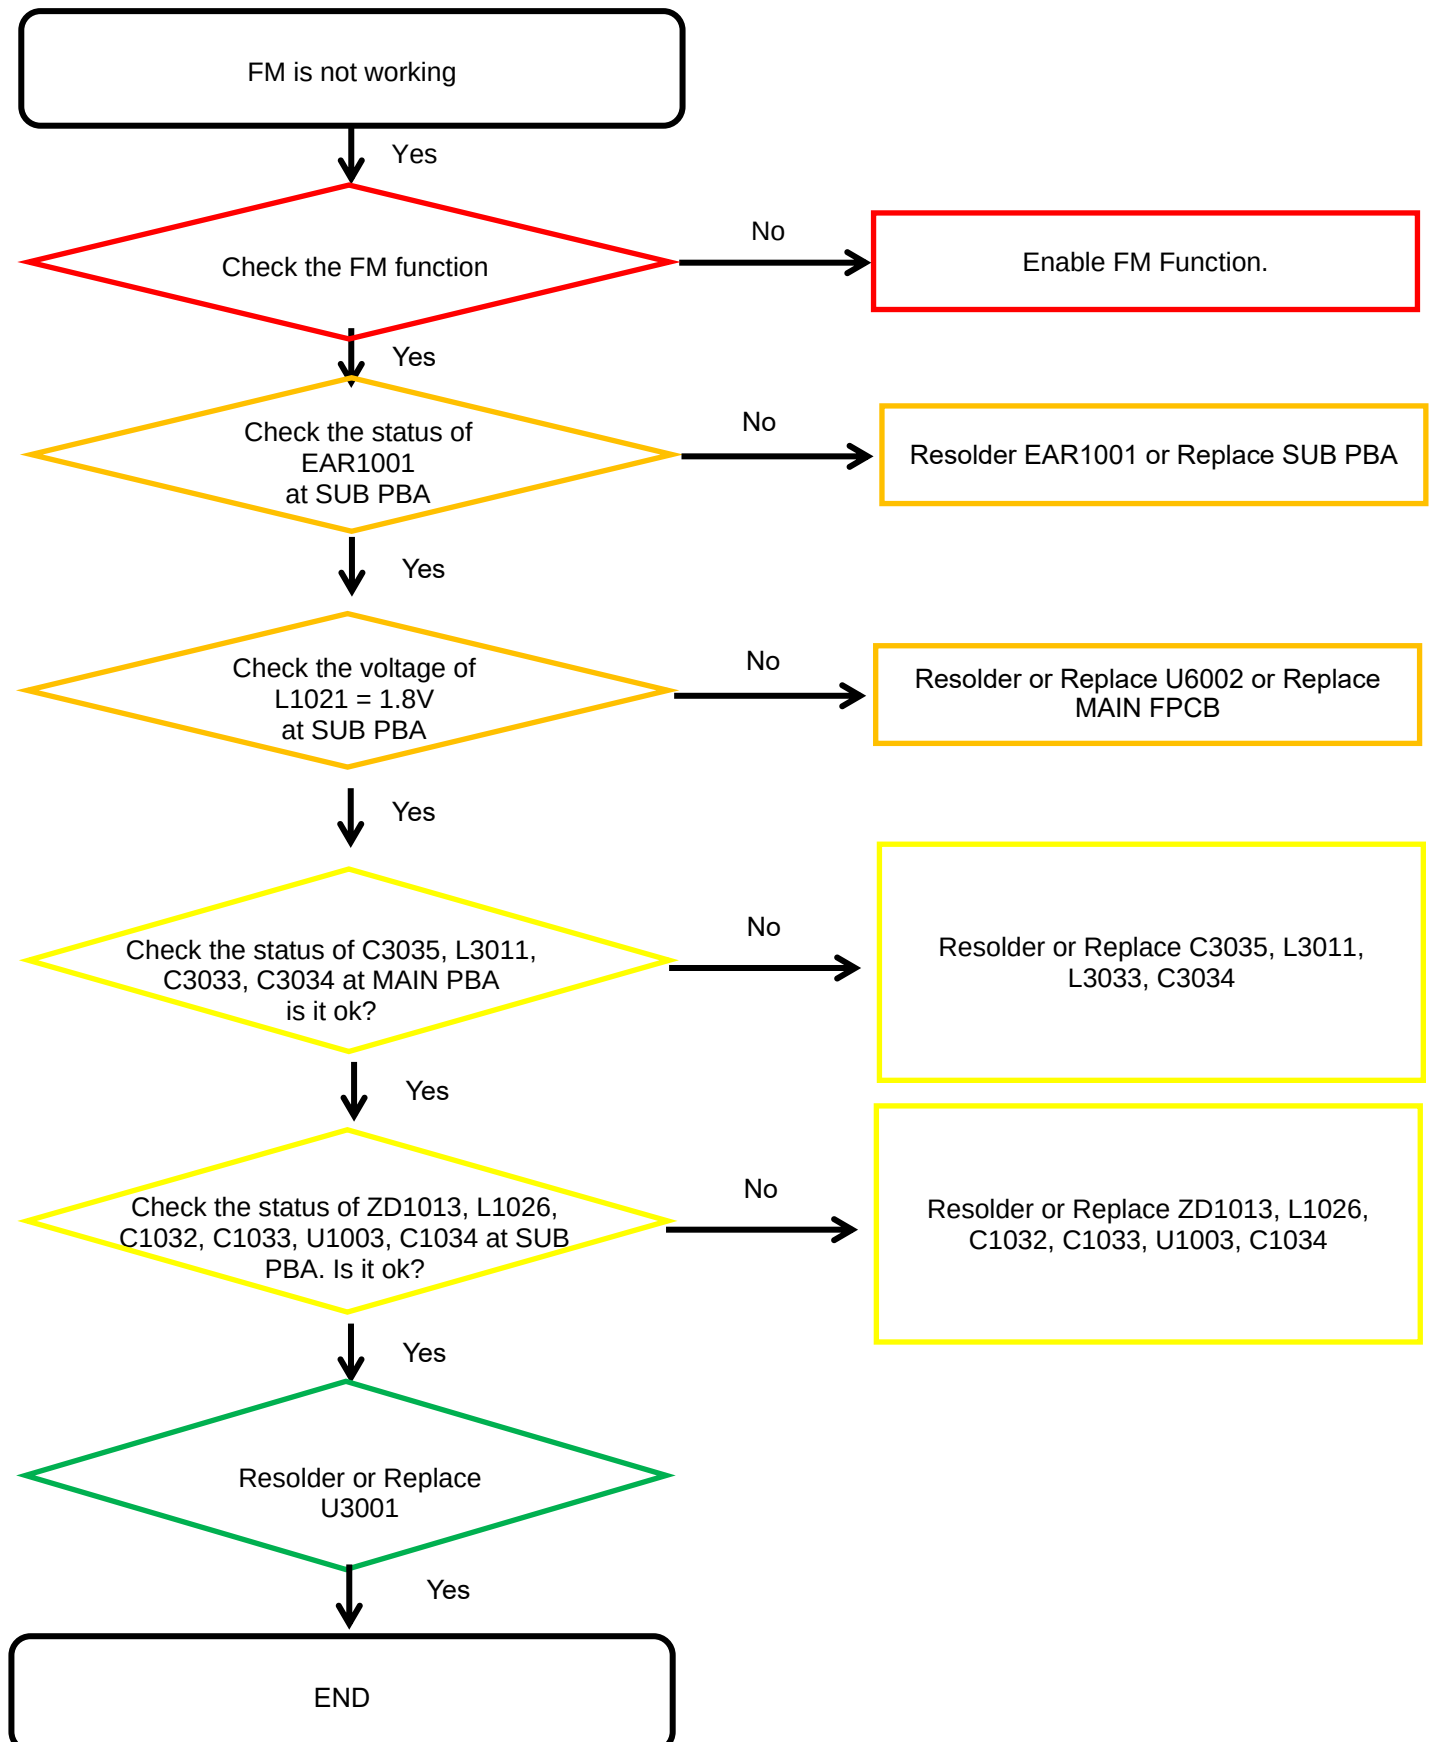


8. Level 3 Repair

8-4-16. Display

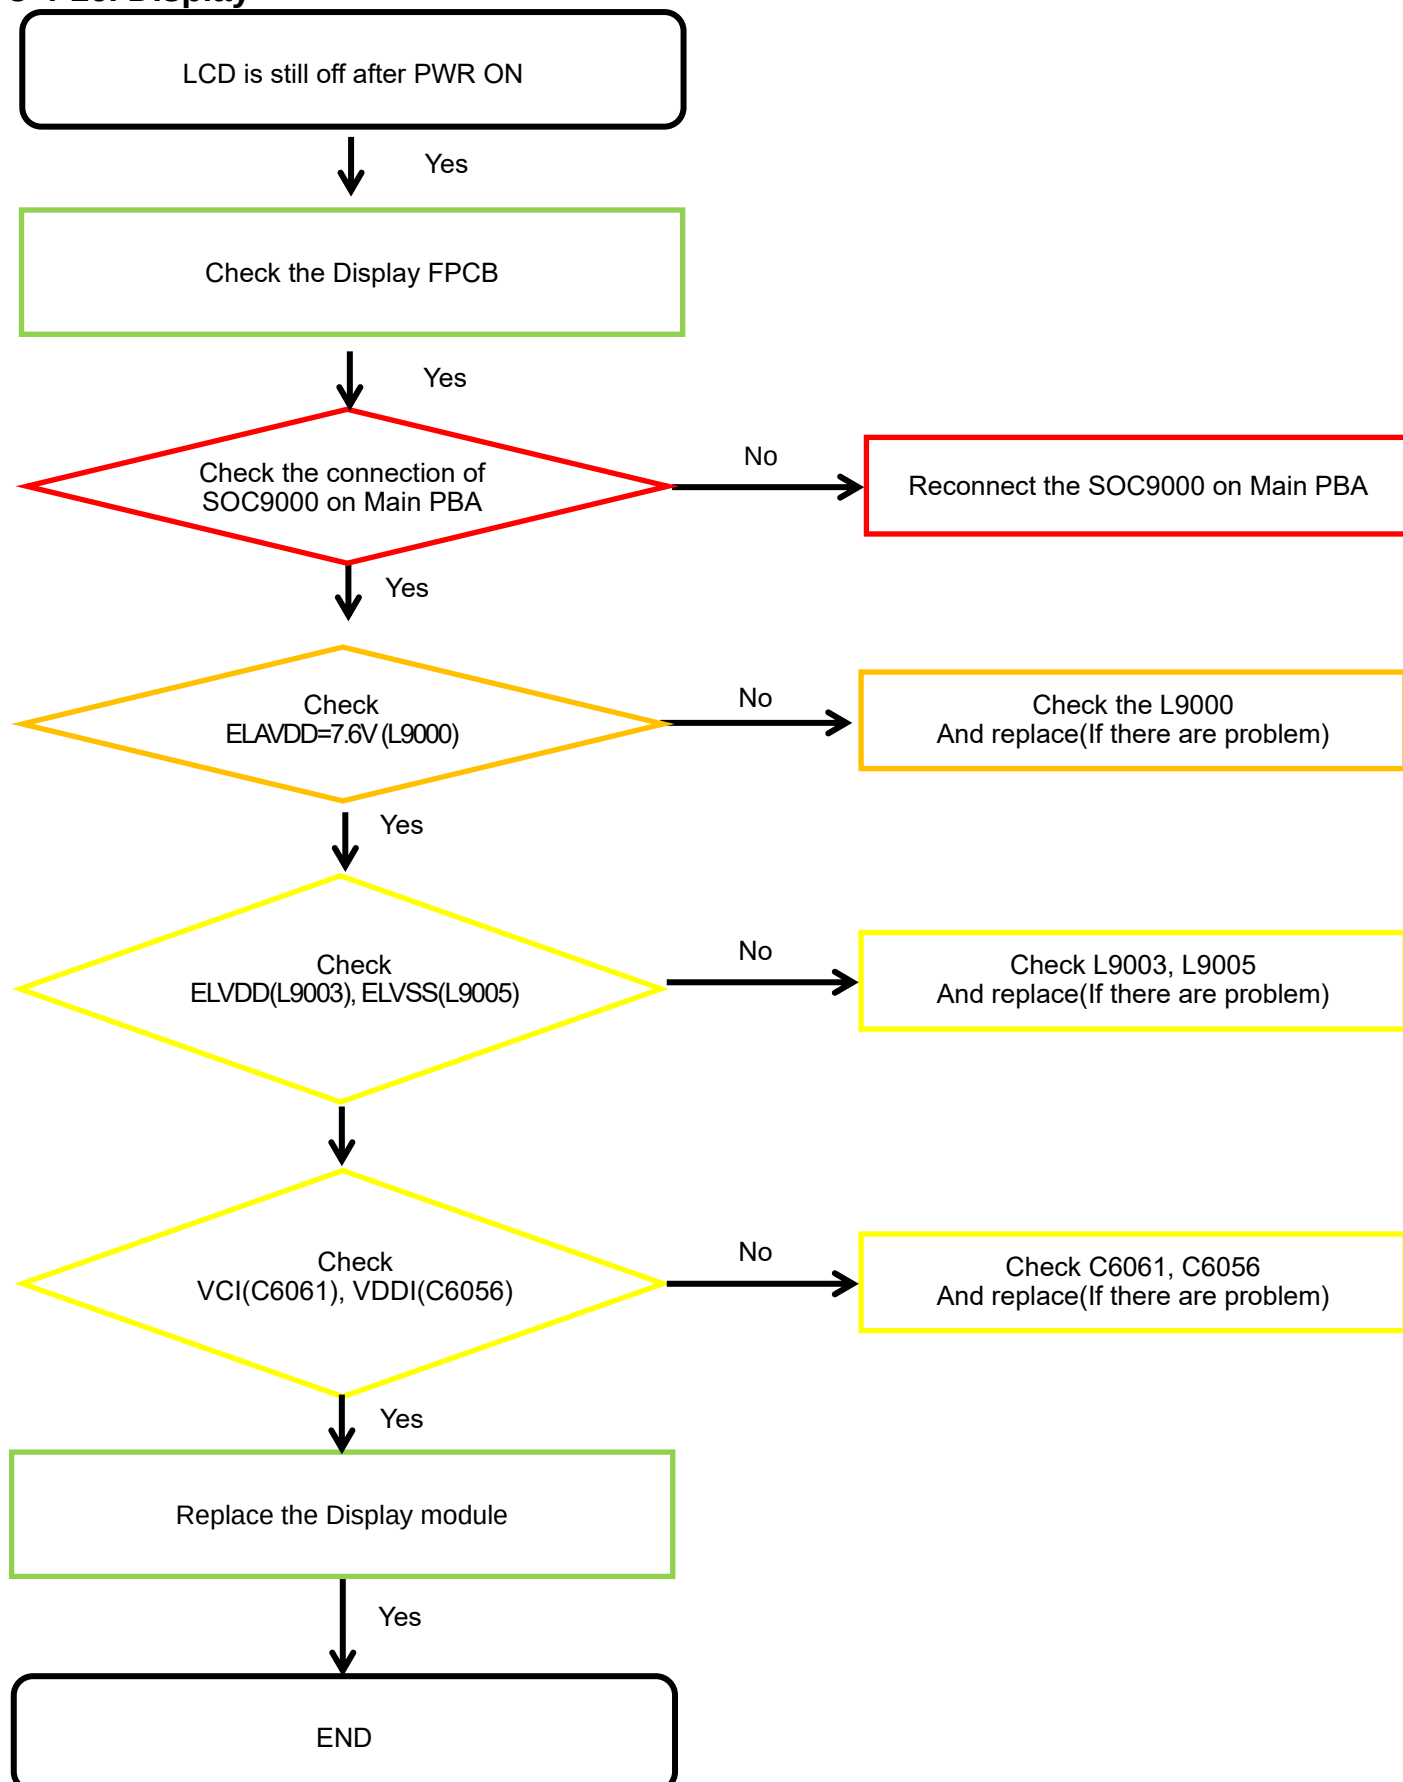


8. Level 3 Repair

8-4-17. Quad Camera

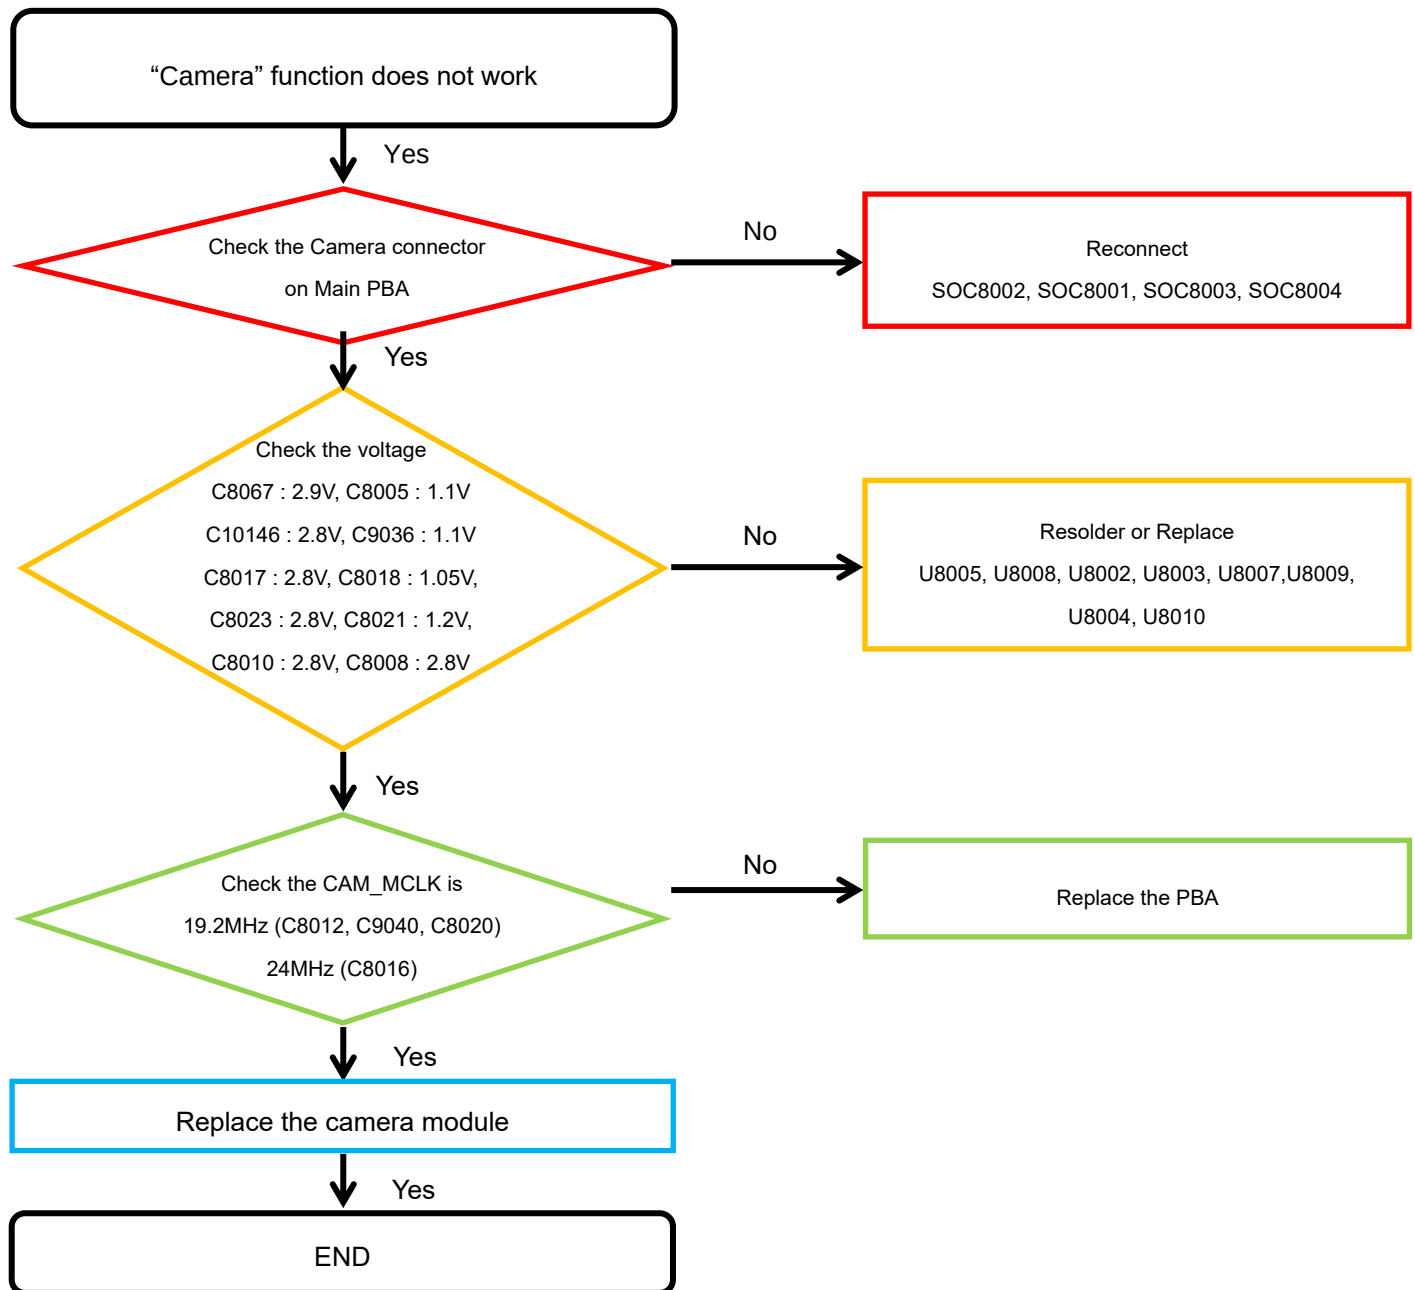


8. Level 3 Repair

8-4-18. VT CAMERA

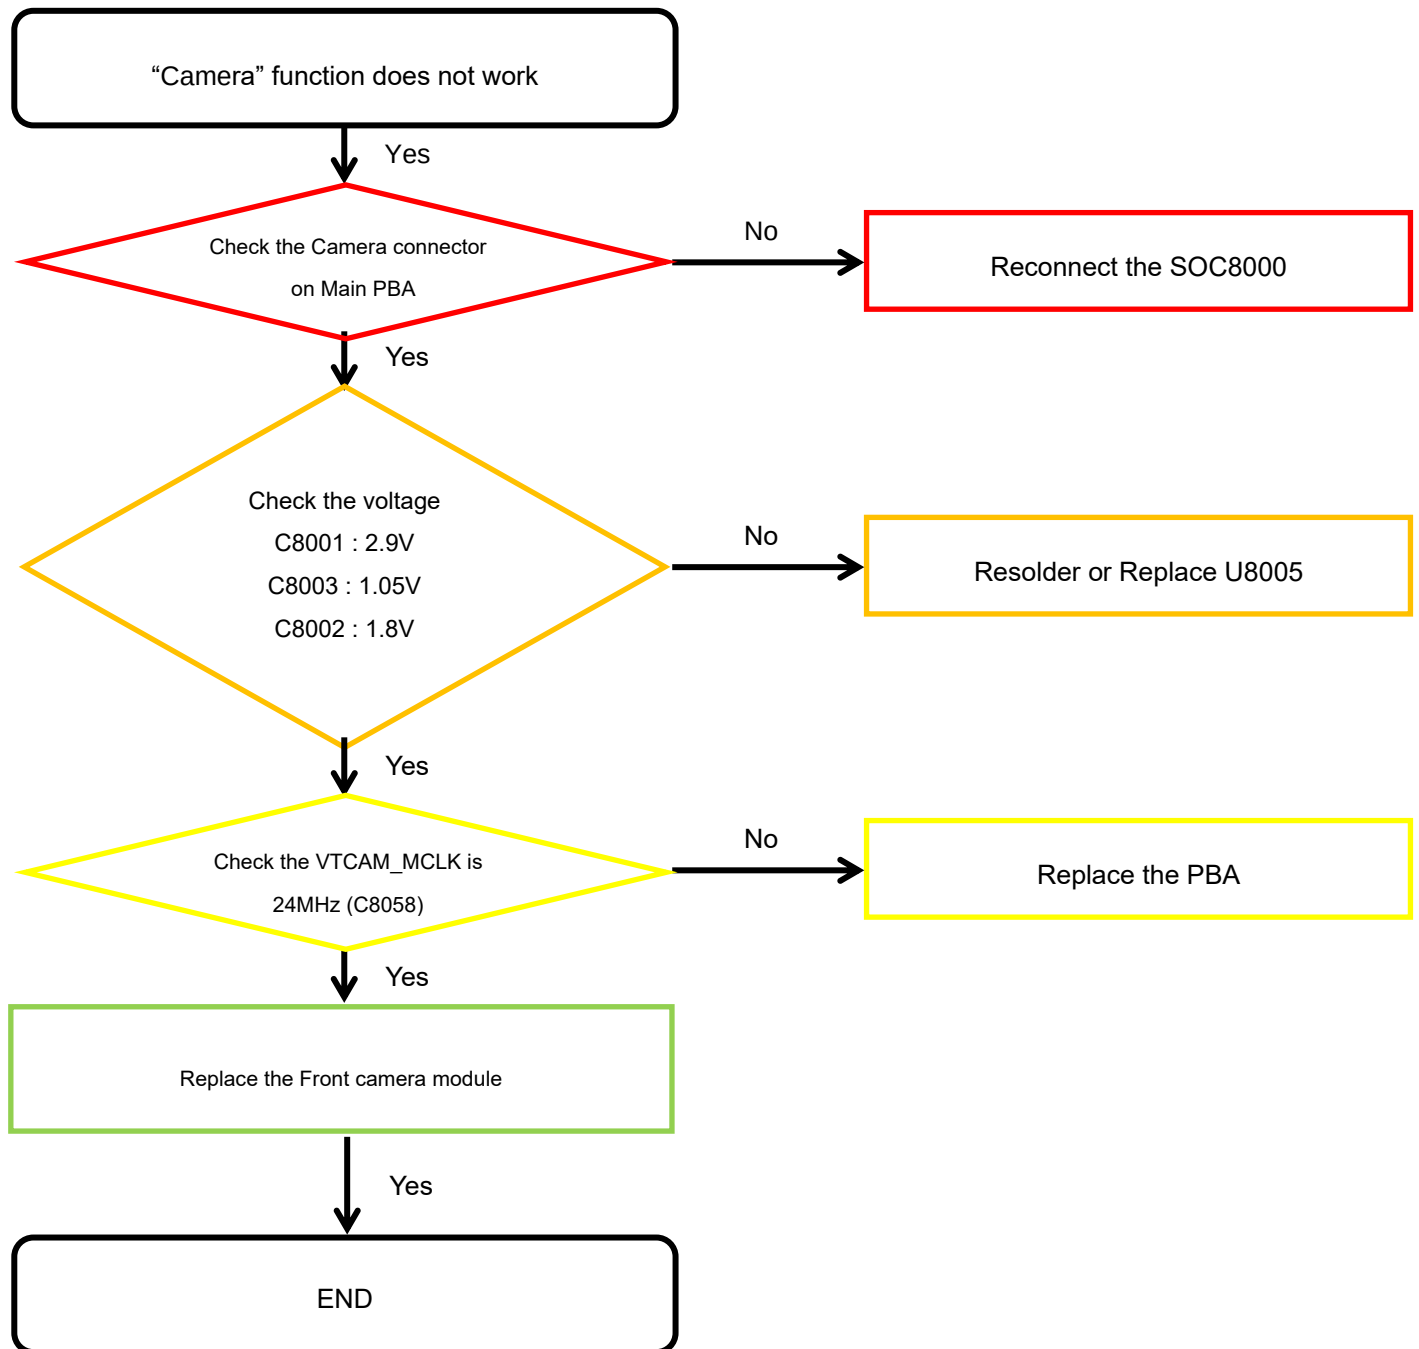


8. Level 3 Repair

8-4-19. Motor

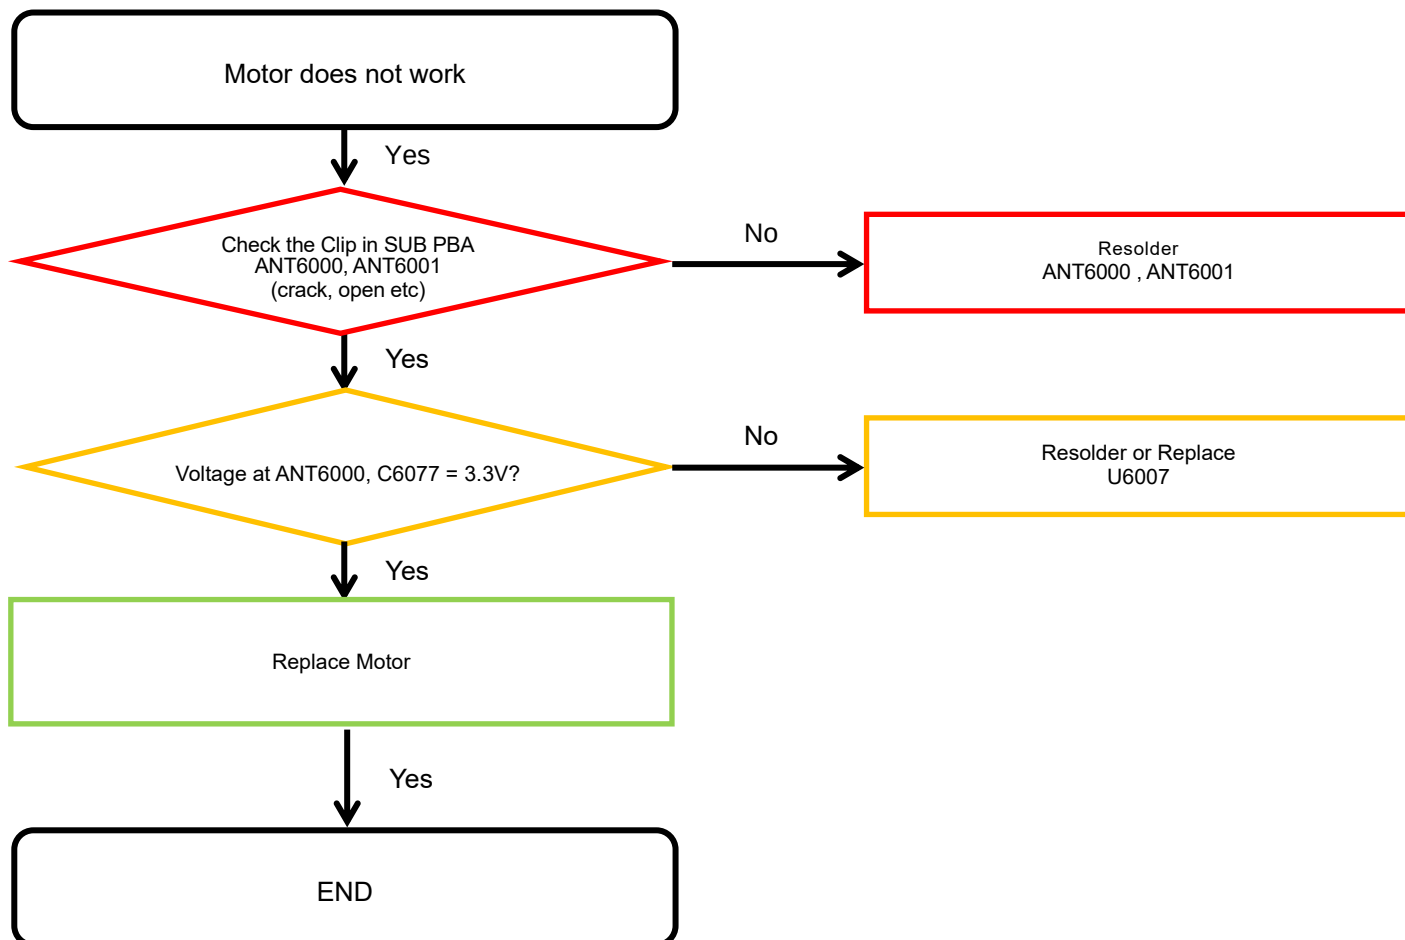


8. Level 3 Repair

**8-4-20. GSM 850/900/1800/1900 WCDMA B1/2/4/5/8,
LTE B1/2/3/4/5/8/12/17/20/26/28/32/66 PRx [SM-A725F]
LTE B1/2/3/4/5/8/12/13/17/20/26/28/66 PRx [SM-A725M]**

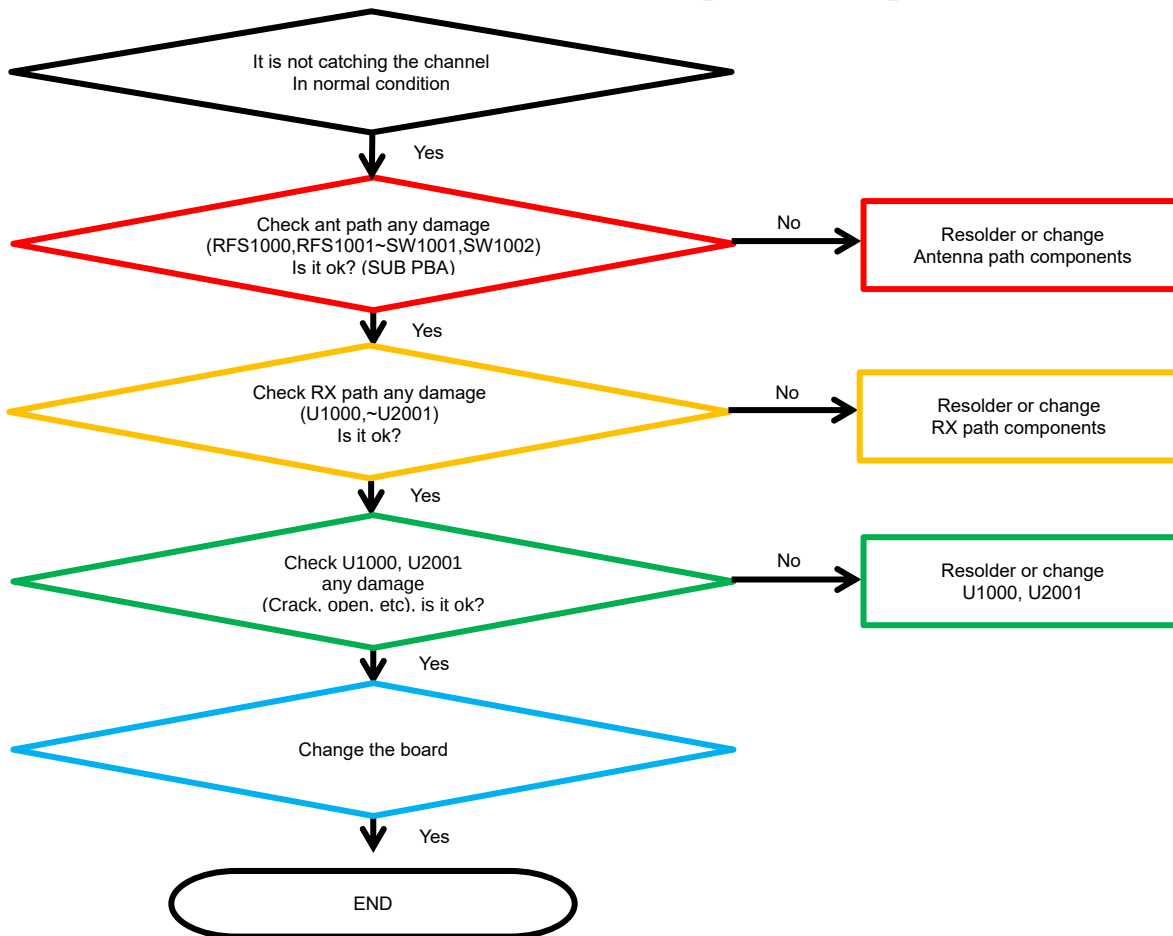


8. Level 3 Repair

8-4-21. LTE B7/ B38/B40/B41/ PRx

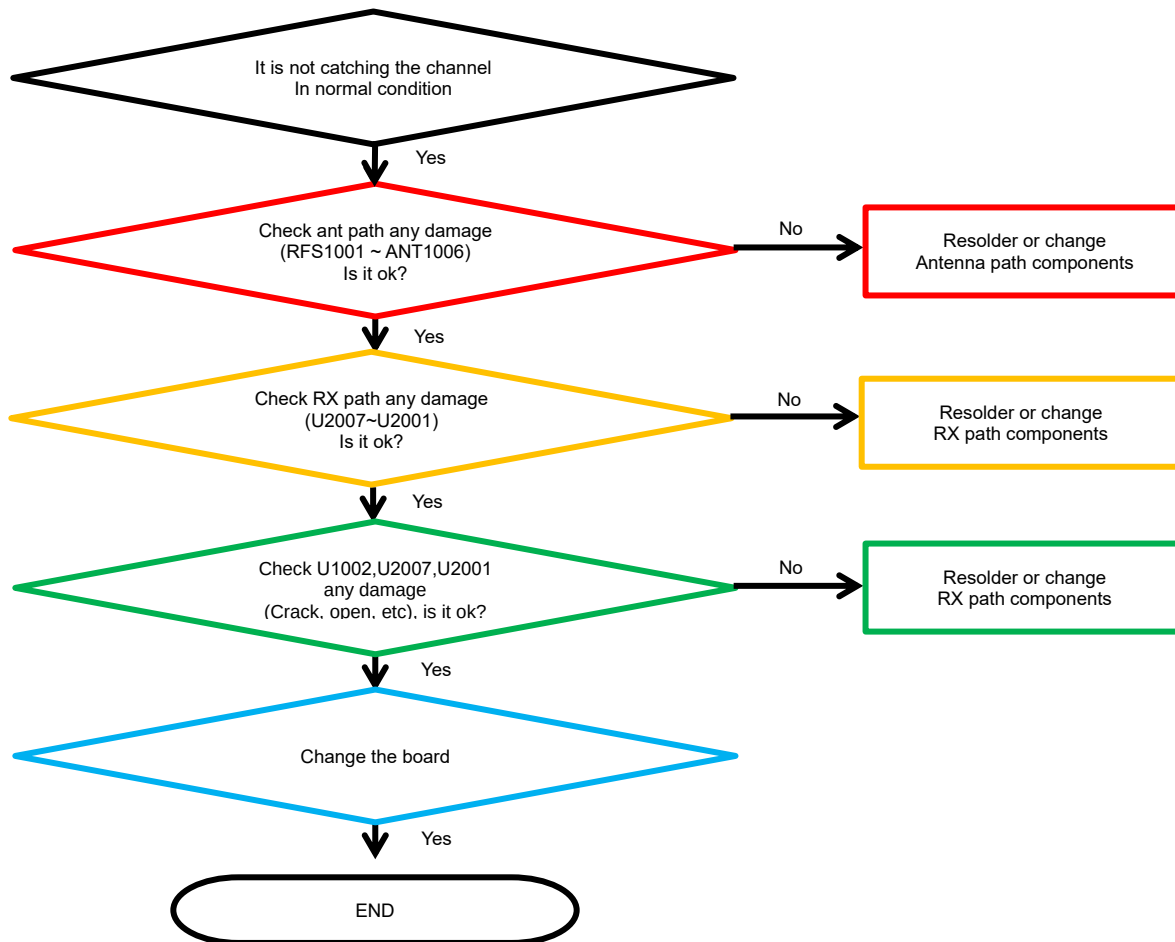


8. Level 3 Repair

8-4-22. GSM 850/900/1800/1900 WCDMA B1/2/4/5/8,
LTE B1/B2/B3/B4/B5/B7/B8/B12/B17/B20/B26/B28/B32/B38/B40/B41/B66 DRX
[SM-A725F]
LTE B1/B2/B3/B4/B5/B7/B8/B12/B13/B17/B20/B26/B28/B38/B40/B41/B66 DRX
[SM-A725M]

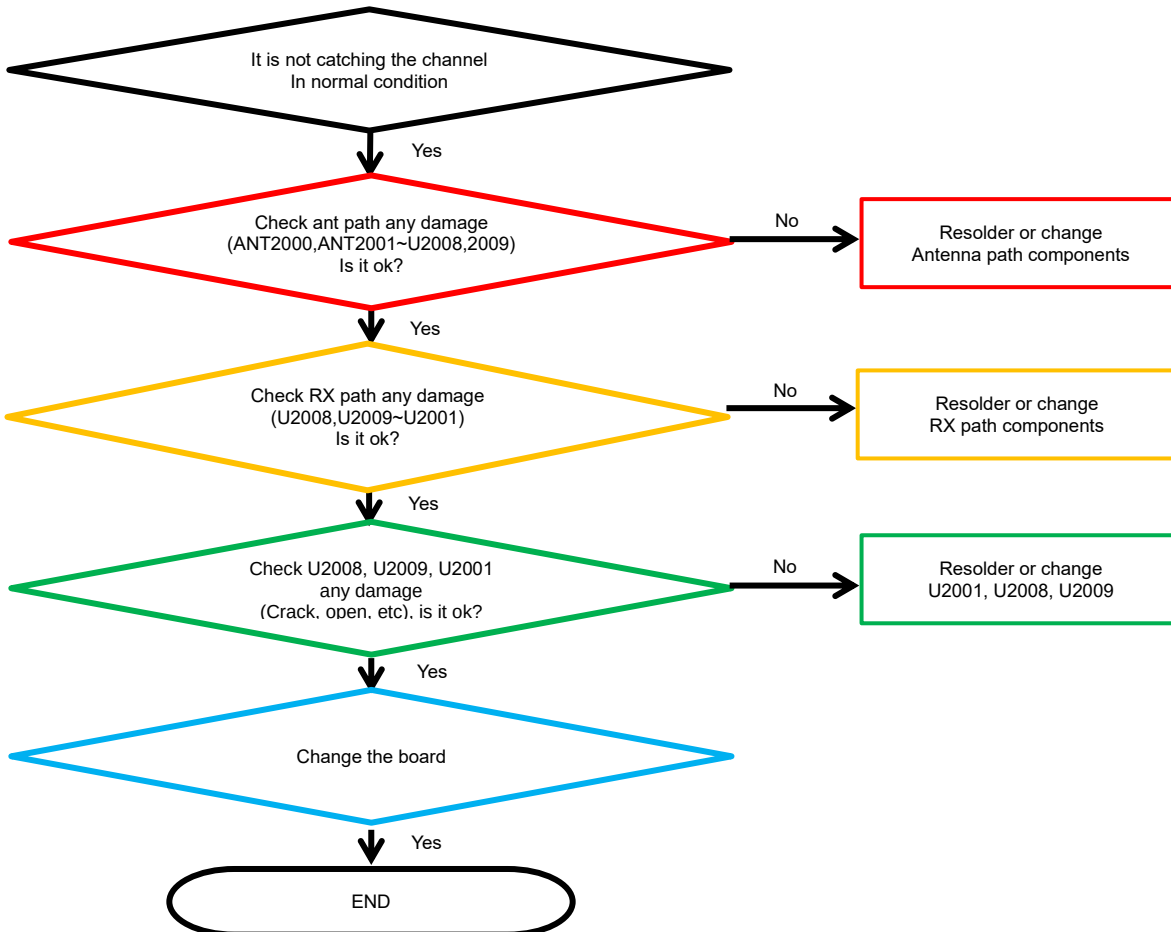

8. Level 3 Repair

8-4-23. GSM 850/900/1800/1900, WCDMA B1/2/4/5/8,
LTE B1/B2/B3/B4/B5/B8/B12/B17/B20/B26/B28/B32/B66 Tx [SM-A725F]
LTE B1/B2/B3/B4/B5/B8/B12/B13/B17/B20/B26/B28/B66 Tx [SM-A725M]

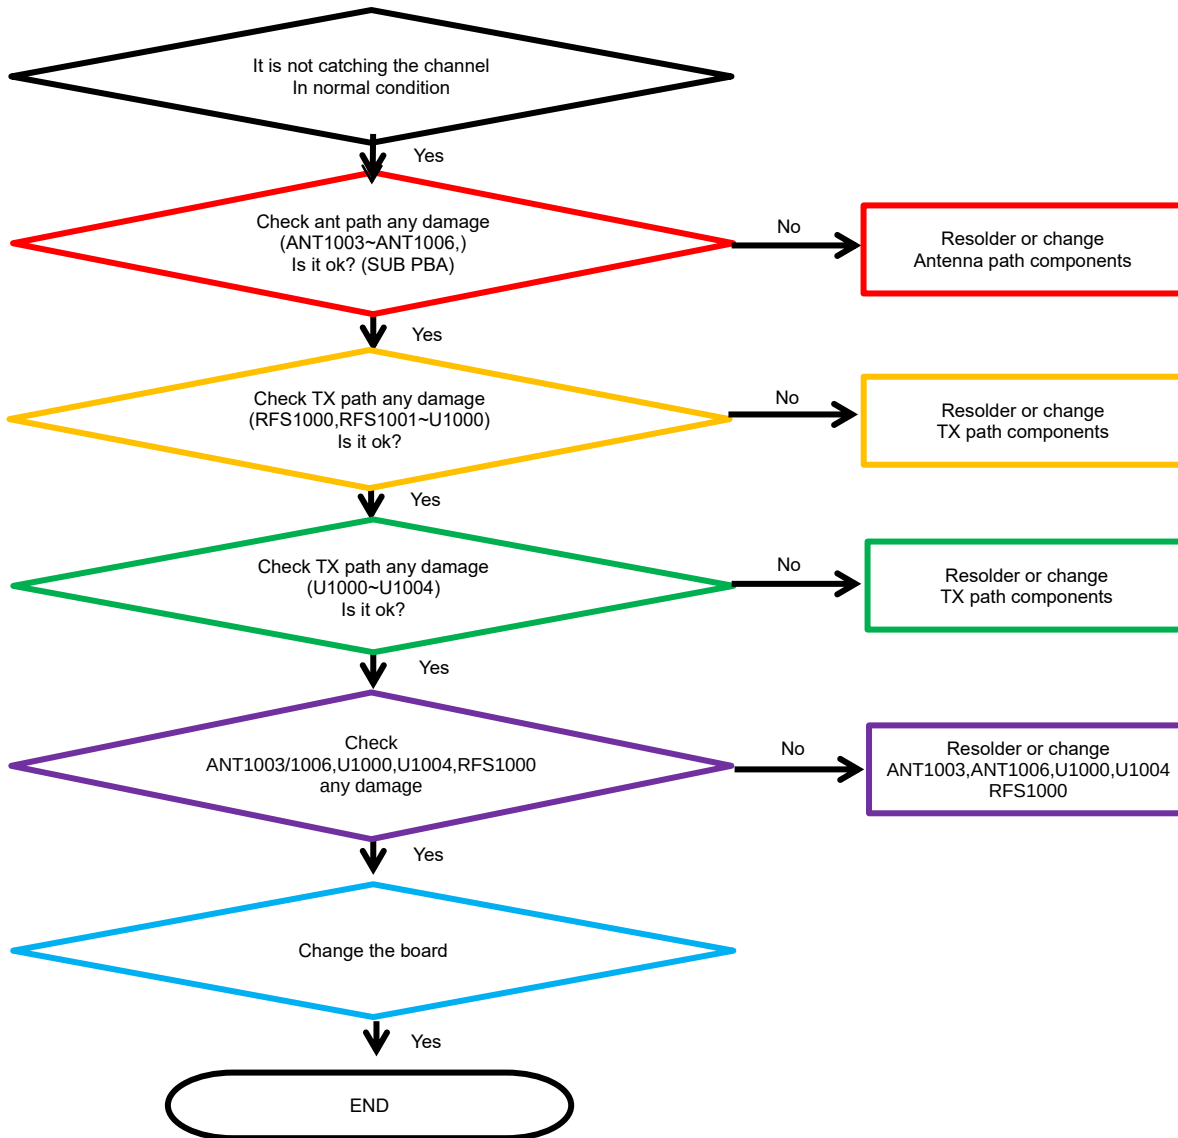

8. Level 3 Repair

8-4-24. LTE B7/38/40/41Tx

